










 




Accel VR 2024 X7






 










USER MANUAL

 

TABLE OF CONTENTS

Presentation	6
About Lumiscaphe	6
How to use this documentation	6
Interface Text	6
Links	6
Boxes	6
Step-by-Step Instructions	7
Copyright	7
Installation and activation of Accel VR	9
Installation	9
Activation	9
Launch Accel VR for the first time	9
License Activation Wizard	10
Create an activation request	10
Activate Accel VR over the network using a license server	11
Use an existing license to activate Accel VR	12
Use an activation with tokens license (USB key)	12
New features in the 2024 version	14
Introducing Accel VR	15
General description	15
Operating principles	15
Understanding the Exploration Shuttle	16
Frames of Reference in Accel VR	17
Working with Accel VR	19
Interface presentation	19
The Configuration Wizard	19
Standard interface	21
The viewport	21
The configuration side panel	22
Simplified Interface	22
Scene tab	23
Configuration	25
Timelines	25
Transformation	26
Cameras	26
Tools tab	26
 Interest point management	27
 Measure tool management	27
 Turntables	28
 Snapshot management	28
 Clipping planes management	28
 Links	30
Product Mesh Collider	31
Collaborative tab	32

Create a collaborative session	32
Join a collaborative session	34
Collaborative session information	36
VR tab	37
 HMD management	38
 Windows	40
 VRPN devices management	40
 Calibration management	42
 Proximity warning management	44
 Canon MREAL management	45
Advanced system settings	45
General	46
Interface	46
Tool Visibility	46
Rendering configuration	47
Pilot	47
Pilot configuration tab	47
Information	47
Mouse manipulation	48
Windows configuration	49
Select manipulators	49
Manipulators	49
Head manipulator	50
Device manipulator	50
Interaction manipulator	50
Shuttle manipulator	55
CAD Tools	57
CAD Tools management	57
Immersion and interaction in the 3D World	58
Creating an Immersive Sensation	58
Camera Animations	58
Interaction Devices	58
Interactive Menu	59
Using the PieMenu system	59
Using the MoveNAct system	59
 Configuration	60
 Animation	60
 Interest Point	60
 Grab world	60
 Spotlight	60

	Manage clipping planes	60
	Snapshot	61
	Measure tools	61
	Turntables	61
	Targeted navigation	61
	Quick bookmark	61
	TouchAction	61
	Select a part	62
	Move part	62
	Reset transform	63
	Curve edition	63
	Show / Hide products	64
	Show / Hide surfaces	64
	FFD Deformer	64
	Material assignment	65
	Common parts import	65
	Image	65
Accel VR Unit		66
Support		67
Appendix		68
	Preparing a database	68
	Linking a Configuration Option to a Surface	68
	Creating Animation	69
	Creating Configuration Bookmarks	70
	Creating Camera Bookmarks	70
	Exporting the Database in the KDR Format	71

Version: 20240611.0304

© Lumiscoppe SA, 2001-2024

Headquarters:

ZA du Courneau II
8, impasse de la rouilleuse
33610 Canéjan
France

Documentation lead: P. Peyrevidal

Reproduction, extraction, presentation, alteration, modification, or use, whether in whole or in part, of this documentation or any of its elements whatsoever, by whatever means or for whatever purpose, and more generally any act that has not been explicitly authorized by Lumiscoppe are strictly forbidden and subject to prosecution.

Trademarks, brands, brand names, service marks, logos, and other distinctive symbols displayed in this documentation are property of their respective owners and are protected by French and European legislation, as well as by other applicable legislation. All unauthorized use or reproduction is strictly prohibited.

This software uses libav 13 (see LGPL 2.1). More info at [libav](#).

The Libav library under Lesser General Public License (LGPL 2.1) and its source code can [be downloaded here](#).

This documentation is provided with the software Accel VR. It does not, however, constitute a contractual agreement with regard to the features and functionality of the software.

PRESENTATION

About Lumiscaphe

Lumiscaphe helps to strategically connect the design and engineering worlds with marketing and sales support by developing and publishing innovative hybrid solutions employing the Digital Aspect Mockup (DAM) and photorealistic, real-time 3D rendering.

Lumiscaphe provides 3D visualization solutions built on solid experience in real-time rendering technology. Lumiscaphe's range of specialized products includes online and offline 3D product configurators, applications and content created for the web and for mobile devices, as well as tools for publishing and sharing. For creators, a software development integration kit is also available.

Lumiscaphe's clients are found in the automotive, aerospace and luxury goods industries, as well as in the architecture world and in the product design community.

Founded in Bordeaux in 2001, Lumiscaphe has become an innovative actor on the worldwide technology market. With offices today in Paris, Shanghai and Osaka, Lumiscaphe is proud to provide its solutions to its clients directly or through a network of certified partners.

How to use this documentation

This documentation describes the interface and the functionalities of Accel VR.

This document is organized by topic. It does not need to be read in order, and you do not need to read it from cover to cover unless you want to. Instead, use the search function (**Ctrl+F**), the table of contents, and the index to help you find what you are looking for. The chapter and first sub-heading are always listed at the top of the page so that you will know where you are.

Interface Text

Text in the interface and shortcut keystrokes are written differently so that they will be easy to see. They appear like ***this*** in the text.

Links

You will also see hyperlinks in the text. If you are reading on screen-based support, you can click on these links to be taken to the related subject. Likewise, the page numbers in the table of contents and the index are links to the pages they indicate. You can click on them to go directly to that page.

Boxes



NOTICE

Boxes like this one are used to indicate novelties for the current software version.



WARNING

Boxes like this one are used to provide a warning.



NOTE

Boxes like this provide additional information. It may be an associated remark or additional explanation.

You may find this information interesting, but it is not essential for understanding the operation or interface being described.



TIP

Boxes like this one give a tip to help you with a better understanding of the concept or with the functionality concerned.

Step-by-Step Instructions

When step-by-step instructions are given, they are formatted as a numbered list:

1. This is the first step.
2. This is the second step.
3. This is the final step.

Copyright

Accel VR 2024 X7

Version: 20240611.0304

© Lumiscophe SA, 2001-2024

Headquarters:

Espace France
4 voie Romaine
33610 Canéjan
France

Documentation lead: P. Peyrevidal

Reproduction, extraction, presentation, alteration, modification, or use, whether in whole or in part, of this documentation or any of its elements whatsoever, by whatever means or for whatever purpose, and more generally any act that has not been explicitly authorized by Lumiscophe are strictly forbidden and subject to prosecution.

Trademarks, brands, brand names, service marks, logos, and other distinctive symbols displayed in this documentation are property of their respective owners and are protected by French and European legislation, as well as by other applicable legislation. All unauthorized use or reproduction is strictly prohibited.

This software uses libav 13 (see LGPL 2.1). More info at [libav](#).

The Libav library under Lesser General Public License (LGPL 2.1) and its source code can [be downloaded here](#).

This documentation is provided with the software Accel VR. It does not, however, constitute a contractual agreement with regard to the features and functionality of the software.

INSTALLATION AND ACTIVATION OF ACCEL VR

Installation

This process installs Accel VR on the computer of your choice. It creates a shortcut in the **Start** menu > **Programs** > **Lumiscaphe** folder and it places a shortcut an icon on the desktop.

You need the following:

- The administrator status on the computer on which you want to install Accel VR
- The installation .msi file for your software.

It is strongly recommended that you run the installation .msi file locally, that is, by backing it up to the computer on which you want to install the software before launching it. You can place it on the desktop or in any folder on your computer.

1. Double-click on .msi file of Accel VR to start the installation. Click the **Next** button.
2. Select the device you want to use in a drop-down menu and click **Next** o continue the installation.
3. Click **Install** to continue. A window appears asking if you want to run this file (if you have not disabled Windows alerts). Click **Yes**. The installer checks that there is enough space on your hard disk to install the software.
4. Presentation of End User License Agreement. Read the end-user license agreement carefully. You must accept the terms of this agreement and tick the box **I accept the terms in the License Agreement** to continue the installation. Click **Next** to continue.
5. A status bar keeps you informed of the installation progress. When the installation is complete, click **Finish** to close the installation wizard.

Activation

You will find in the sections below the process to install and activate Accel VR.

Launch Accel VR for the first time

The first time you launch Accel VR by selecting it from the menu **Start** > **Programs** > **Lumiscaphe** or by double-clicking the icon on your desktop, the activation wizard opens automatically. You need to activate Accel VR first before using it.

In order to activate your software, you need a license. The following procedures show you the steps-by-steps guide to get your license key and activate the software.


Follow the steps below or contact support at license@lumiscaphe.com (<license@lumiscaphe.com>) for further assistance.

To purchase a license or to obtain an evaluation copy of Accel VR, the sales team is at your disposal. You can reach it at sales@lumiscaphe.com (<sales@lumiscaphe.com>).

License Activation Wizard



TIP

The activation wizard launches when you open Accel VR for the first time. You can also find the assistant at any time from  > **Change license** > **Change license**

The activation wizard shows you the steps to activate Accel VR.

Choose from the three options presented:

- **Create an activation request,**
- **Activate the product with a license server over the network,**
- **Use an existing license to activate the product,**
- **Activate the product with tokens license (dongle).**

Create an activation request

Choose this option if you need to activate Accel VR via a nodelock license or if you have already purchased a nodelock license but you have not yet received a license activation key.

1. Select **Create an activation request**, then click **Next**.
2. Fill in the account information requested by the activation wizard on the next screen. You must provide your name, company and email address. Enter your work email address so that we can identify you. We send the license key to the business email address you provide in this step. Once the fields are filled, click on **Next**.
3. Click on the **Save** button. Choose where this file will be saved. It is advisable to save it in a place easy to find, for example, the office. By default, the name of the file is presented as follows: "20190213_YourCompany_vrc_ng.lar". Do not change the name of this file.

Create an activation request window


4. Click on **Finish** to close the wizard.
5. Email the file you just saved to license@lumiscaphe.com (<license@lumiscaphe.com>).

- Upon receipt of this file, we will send you your activation key. Once your activation key is received, you can launch Accel VR again. This time choose the option **Use an existing license to activate the product** when opening the wizard.

Activate Accel VR over the network using a license server


Choose this option if you purchased a floating license and already installed it on an RLM server. Your computer must be connected to this server over the network. This method is currently valid for all floating licenses.

- Select **Activate the product with a license server over the network** on the first screen of the activation wizard, then click on **Next**.
- Enter the name of the RLM license server in the text box. If you do not know the name of your RLM license server, ask your system administrator. Click on the **Next** button.

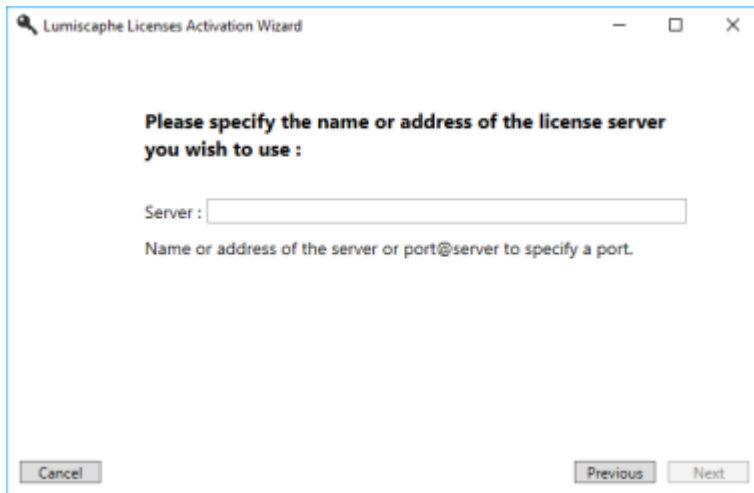

License activation with an RLM license server

- Your activation is complete. Click on **Finish**.
- The window that opens displays all the licenses available on your server.

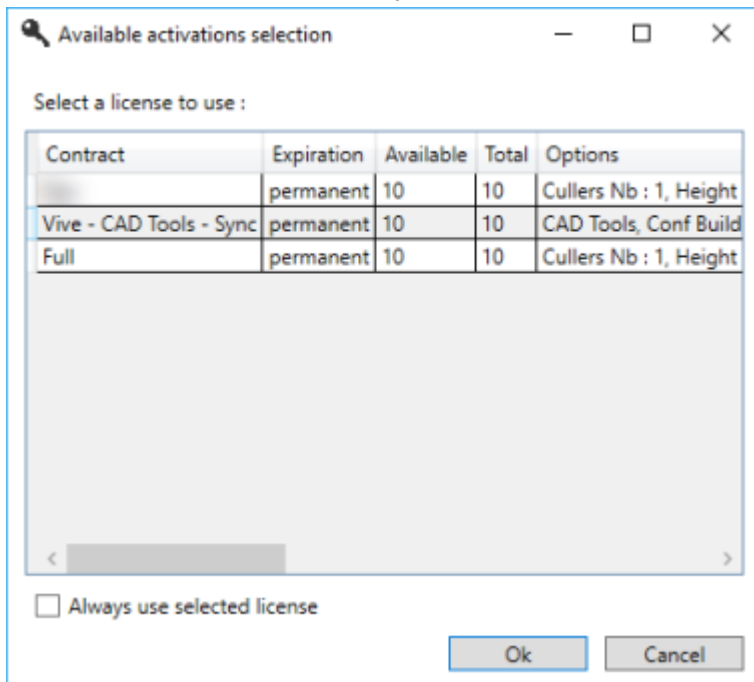

Example of licenses available on the server

Click on the license you want to use. If you only have one license available, or if you always want to use the same license, you can check the box **Always use selected license**. If this option is not checked, you must select a license ID each time you open Accel VR.

Then click on **Ok** to start Accel VR.

Use an existing license to activate Accel VR

Choose this option if you have already received your activation key. The name of an activation file ends with the .lic extension.

Choose option **Use an existing license to activate the product** to use the activation file sent to you by email. This file must be saved on your computer.

1. Select **Use an existing license to activate the product** on the first screen of the activation wizard, then click **Next**.
2. A window shows up to browse the activation file that has been sent by us by email and you have saved on your computer. Select it and click **Open**.
3. Click **Next**.
4. Your activation is complete. Click on **Finish** to launch Accel VR.



TIP

It is recommended to keep your .lic file in a safe place.

It can also be used to help us if you encounter a problem during activation or during a subsequent operation.

Use an activation with tokens license (USB key)

Choose this option if you have an UniKey type dongle (USB key) to use Accel VR occasionally. Indeed, the activation of a license token by the USB key is valid for 24 hours from the moment of the acquisition of the token.



TIP

Once the token license has been activated, it is not necessary to let the USB key (dongle) plugged into your computer. The token remains valid until the 24-hour period is over. When the token is no longer valid, it is necessary to plug the USB key back in to use another one token.

1. There are two activation possibilities:
 - Via the dongle which is connected to the computer.
 - Via a server or network. In this case, it is possible to indicate the IP address of the server in the dedicated field (speeds up the search for the server). If the specified server is not available, it is possible to automatically search for a server on the local network by checking the box.
2. Once you have made your choice, click on **Next >** and the wizard confirms that the activation has been completed.
3. Click on **Finish**.

4. Accel VR will ask you to use a new token.

NEW FEATURES IN THE 2024 VERSION

INTRODUCING ACCEL VR


In this chapter you will learn the basics to be able to use Accel VR.

General description

Accel VR is a virtual reality software solution designed for the visualization of Digital Aspect Mockups on a 1:1 scale on multi-screen immersive systems.

Visualization on a 1:1 scale makes it possible to assess objects with regard to their actual size and complements the photorealistic rendering quality of the Lumiscaphe rendering engine with an extra dimension of realism.

Accel VR conforms to a wide range of configurations. Its use is suited to various visualization profiles and modes, such as multi-screen devices, image walls based on juxtaposed projections, immersive systems of the C.A.V.E. type, or Head-Mounted Displays.

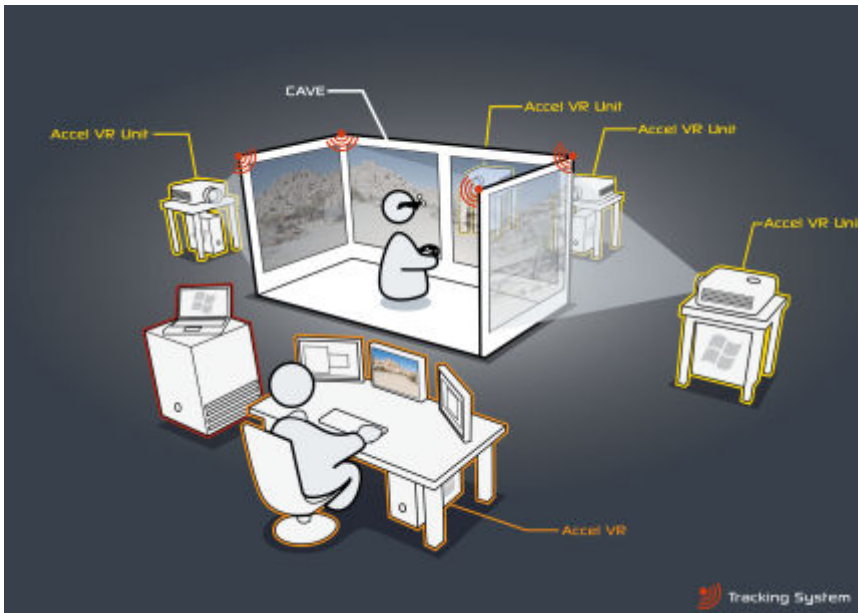

Overview of a CAVE operating with Accel VR.

Accel VR also supports several stereoscopic display modes and can interface with different tracking systems to enrich sensory experimentation during the project review.

Operating principles

Accel VR works with two different entities: Accel VR Pilot and Accel VR Unit.

It is important to understand the role of each of these entities to properly install the software solution.


Accel VR Unit calculates images in real-time and displays the rendering on a remote screen of the visualization device while Accel VR Pilot manages calculation units that generate images on a VR headset.

These software entities are designed to communicate on a local network, but could be executed on a single computer if necessary.



TIP

There is no order to launch the two software entities: Accel VR Unit can be launched before Accel VR Pilot and vice-versa. It's recommended to test your infrastructure configuration to be sure entities correctly communicate.

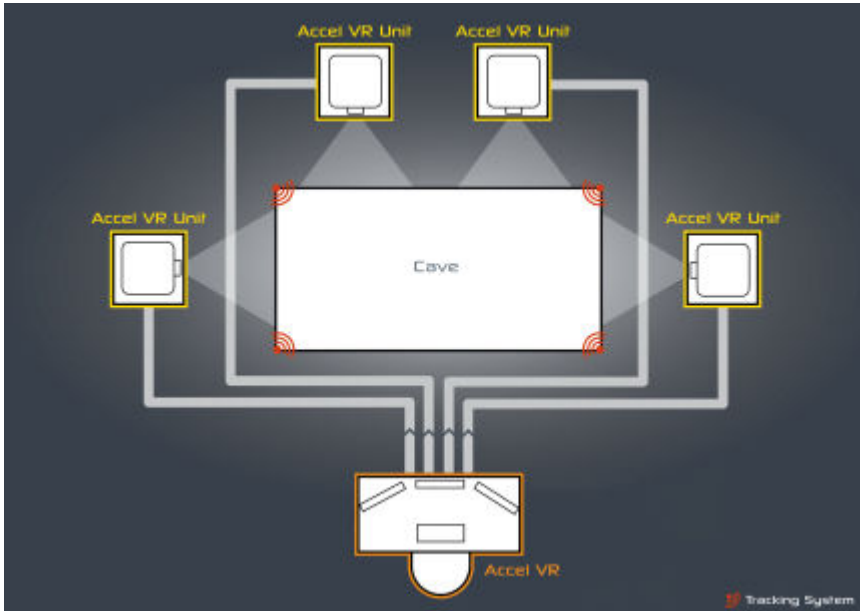

Accel VR software entities operating principle.

Multi-screen or stereoscopic configurations require several calculation units to ensure optimal fluidity of rendering (min. 30 fps). Each rendering Unit calculates images intended for a single projection surface. A stereoscopic projection surface should display two distinct images and therefore it is best to consider it as two projection surfaces in system sizing.



TIP

It is best to install as many Accel VR Unit stations as there are projection surfaces in the visualization center. However, a station can render as many monocular projection surfaces as it has GPUs. If necessary, both eyes of a stereoscopic projection surface can be calculated using one GPU only, but the system performances will be reduced by half.

Each Accel VR Unit station is responsible for its own rendering piece. The final image consisting of all the screens of the visualization device is a mosaic of synchronized renderings.


Accel VR Pilot is the control station, its graphical interface allows an operator to import and manipulate the Digital Aspect Mockups prepared in Patchwork 3D or layouts produced in Patchwork Explorer.

The architecture of Accel VR makes it possible to manage the uniqueness of the various possible hardware configurations and visualization systems.

Understanding the Exploration Shuttle

Schematically, the installation can be considered as a mobile virtual space (often compared to an exploration shuttle) containing windows that are open to the world (the projection screens, VR headset).

The observer can move around in this space and observe the world through these windows.

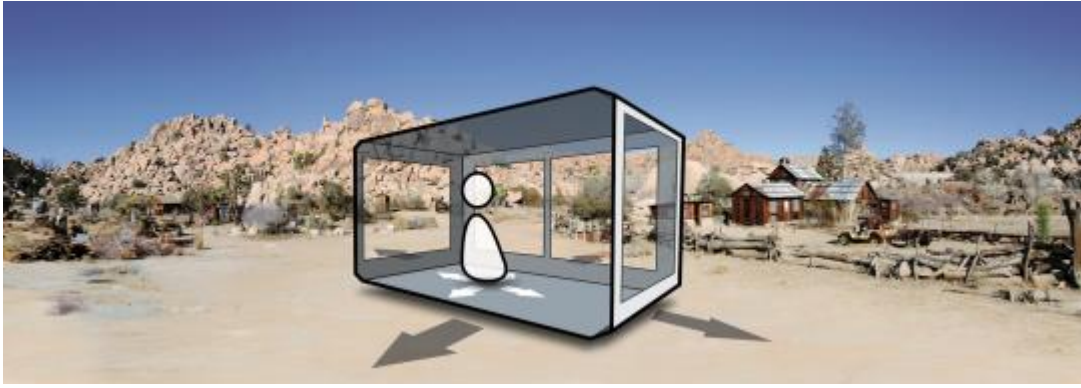

Exploration shuttle.

Frames of Reference in Accel VR


The fifth frames of reference used in Accel VR are:

- the world frame,
- the shuttle frame,
- the tracking frame,
- the head frame,
- the frame of the devices (right hand or left hand).

The world frame is the frame used in the database. Its origin is the center of the grid visible in Accel VR Pilot.

The shuttle frame is represented in the following scheme. Setting the origin of the shuttle frame at the center of the room is recommended. Its axes are positioned so that X and Y axes are collinear to the plane of the main window (front window) and Z axis is orthogonal to it.

The tracking frame and the shuttle frame are superimposed when the tracking system is calibrated according to the recommendations of the configuration assistant.

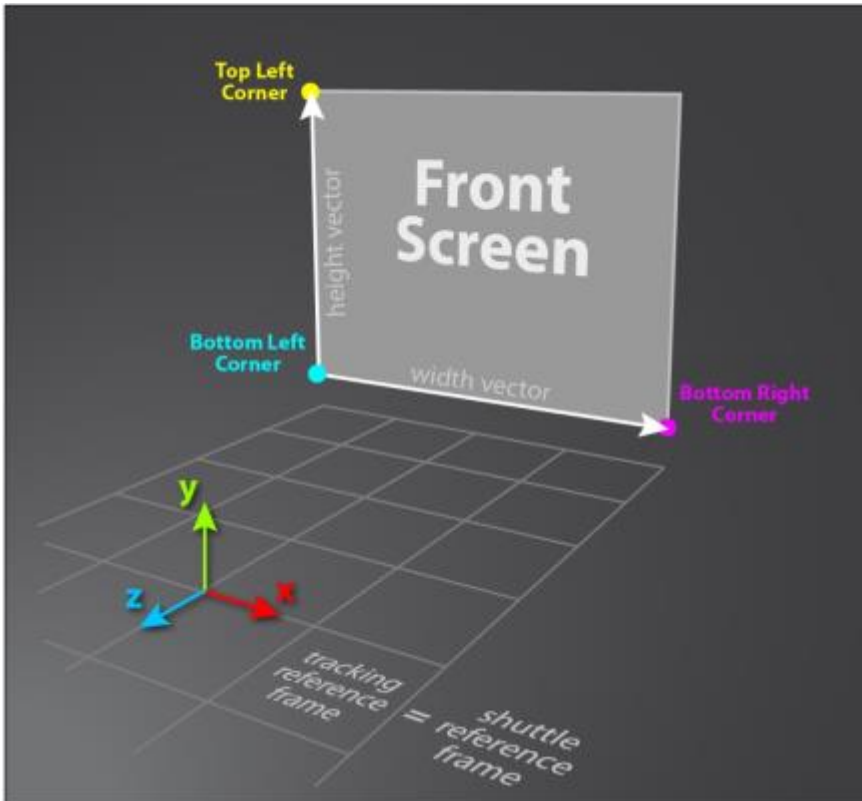

Shuttle and tracking frames of reference.

The head frame is controlled by the Head Manipulator.

- In the case of using a CAVE with tracked glasses, its origin is at the center of mass of the tracking targets or on one of them. It is highly important that in the tracking software, the frame is oriented so that the X axis points to the right (when looking through the glasses) and either Y or Z is vertical (based on the overall vertical of the tracking system). The position of each pupil center is defined with regard to this origin.
- In the case of using a VR headset, this frame of reference is provided by the headset software (HTC VIVE® or Oculus Rift®). Please follow the calibration process of Steam VR room.

WORKING WITH ACCEL VR



NOTICE

Accel VR is available in several editions Enterprise, Premium and Community tailored to your needs.

Accel VR Community is a full software and free to use for non-commercial use.

Accel VR Premium, for its part, is intended for commercial use. You must acquire a Accel VR Premium license to use it.



NOTE

Note that Premium and Community editions have their own unique file version. These two editions can work together. On the other hand, a file created and/or exported from Patchwork 3D Enterprise cannot be opened or read with Accel VR Premium or Community.


Interface presentation

Accel VR Pilot is the command post used by the operator of a device (VR headset, CAVE, etc...). From Accel VR Pilot, the operator loads databases, adjusts system settings, chooses rendering options, establishes and manages connections, and handles the monitoring of the user in the immersive environment.

The Configuration Wizard


When you first launch Accel VR, the Configuration Wizard automatically opens to guide you step-by-step through setting up your immersive device.

1. Select the immersive device family (VR headset, CAVE, or Powerwall) you want to use in Accel VR, then click **Next**.

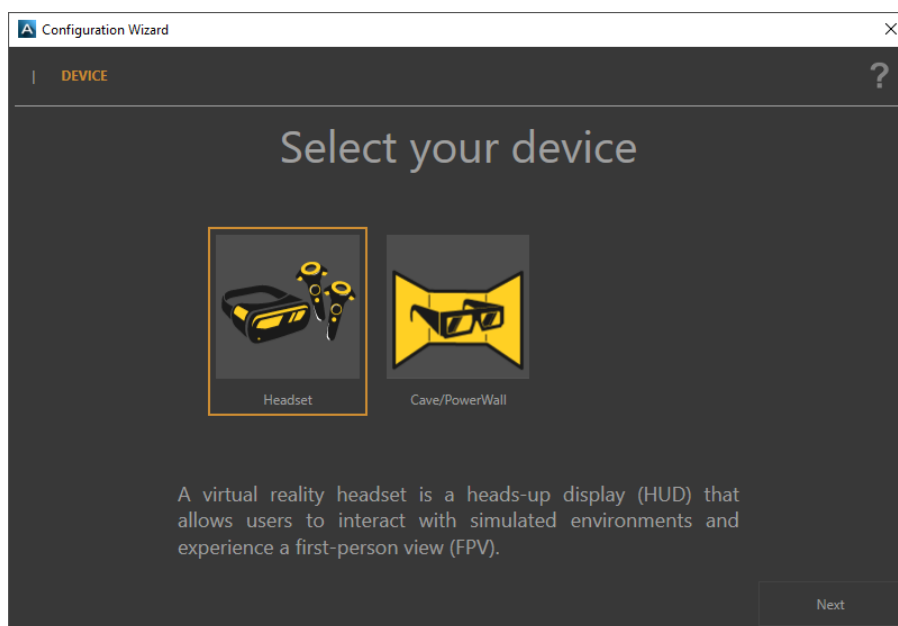


Example of a user selecting a virtual reality headset.

- Then select the controller(s) for a VR headset, the hand(s) for CAVE, or Powerwall that will allow you to interact with the 3D environment. Then click on **Next**.

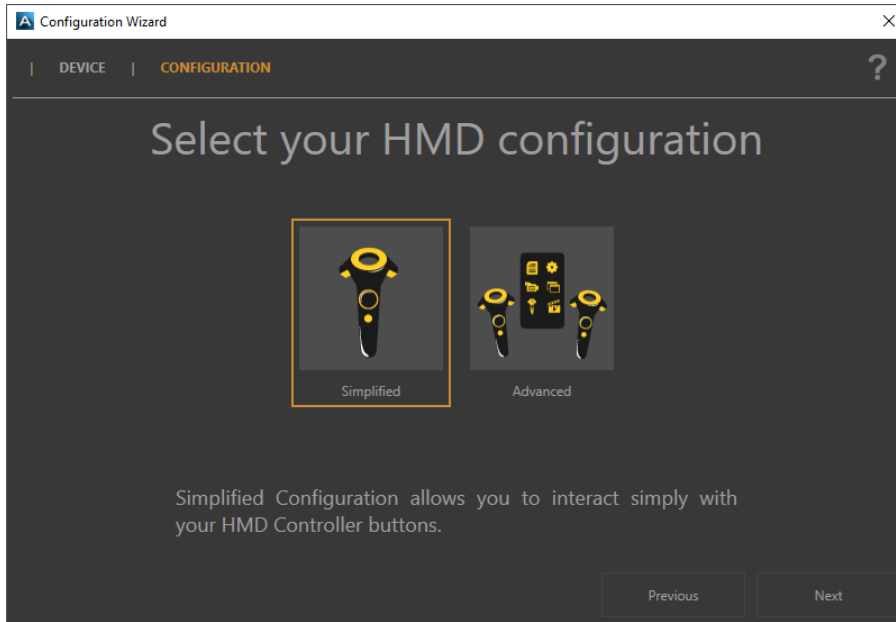

The user then selects the operation mode with one or two joysticks. In this example, the user chooses to use the simplified mode.

- Enter your name or nickname, then select a color that will be used to identify you in the collaborative session and the avatar of the immersive device that you will use. Then click on **Next**.

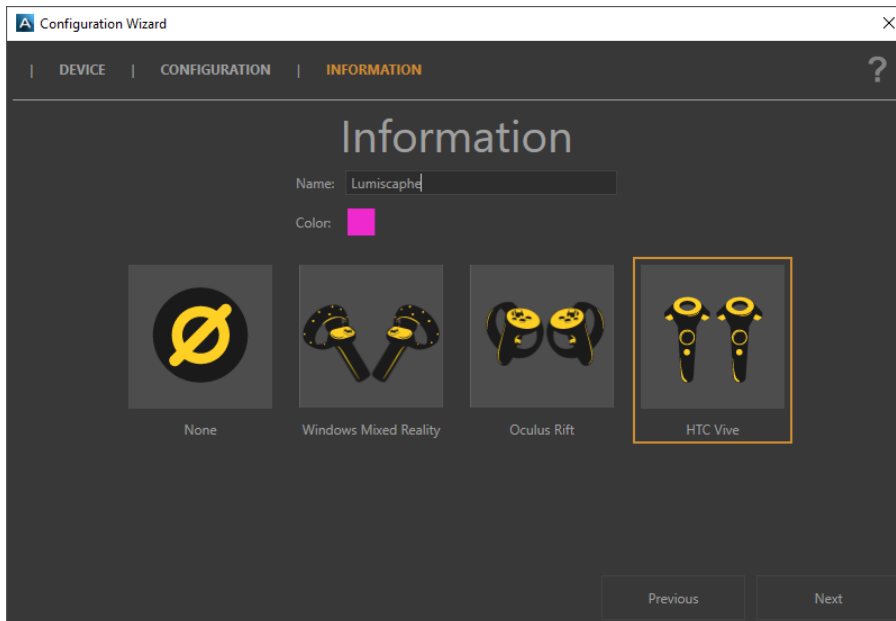



To complete the immersive device setup in Accel VR, the user selects the avatar of their device.


Congratulations, you are now ready to use your immersive device.



TIP

At any time you can restart the **Configuration Wizard** to add and configure a new device. For that,

1. Click on the following icon  in the Accel VR toolbar to open the **Advanced system Settings**.
2. Then click on this icon  which is at the bottom left of the window to relaunch it.

It is also possible to restore the last configuration of the configuration wizard by clicking on .

Standard interface

The interface of Accel VR consists of three distinct areas.



Accel VR Pilot interface with the configuration side panel unfolded.

The viewport

A

: The viewport is the visualization space in which the content of the scene is represented.

This space acts as a remote control screen. A remote operator can thus manipulate the camera in this 3D scene without taking the place of the observer interacting with the main 1:1 scale visualization device.







**TIP**

Ctrl+Spacebar sets the center of interest in the scene where the mouse cursor is. The focus is automatically repositioned at the center of the viewport.

The configuration side panel

You will find in the configuration side panel, the toolbar, and the configuration tabs.

B The toolbar allows:

-  Activate/deactivate the Accel VR Pilot connection to Accel VR Unit to run rendering.
-  Display a virtual reality scene from the Pilot's point of view.
-  Display a scene in VR according to the operator's point of view.
-  Hide a scene in the View. This feature is useful for saving computer resources.
-  Give all the information to know the software: version number, user manual, license change, version changes, and license contract.
-  to display the [Advanced system settings \[45\]](#).


Configuration tabs

C : You will be able to import, open Digital Aspect Models (DAM) or layouts (KPL file format) and navigate among imported products.

Tabs permanently provides access to the tools most commonly used to configure:

- Digital Aspect Mockups (DAMs) or layout(s),
- the positioning of one or more DAMs in the environment,
- the environment,
- scene rendering by the main computer (pilot),
- remote rendering units,
- synchronization with other immersive devices.

Simplified Interface

Accel VR offers the possibility to reduce  the configuration side panel to maximize the View while allowing the main configuration tools of your model at your disposal.



Accel VR with the configuration side panel collapsed.



TIP

The simplified interface can be activated directly via the [VR tab \[37\]](#) by selecting the **Simplified** preset or via the [Advanced system settings \[46\]](#).

Scene tab

Accel VR is designed to explore multiple products and KDRs at the same time to create a layout, that is to say, a staging.

Below are the actions available to manipulate a product or set of products in the viewport.


Icon	Action	Description
	Show	Shows the selected product.
	Hide	Hides the selected product.

Icon	Action	Description
------	--------	-------------




Open a database or layout

Open the database repository.

By clicking this button  from the database repository, you can import a product or a layout from your computer's hard drive or from the Lumis 3D web service.


Import file directly to the scene opens the product or a layout to display it directly in the viewport.

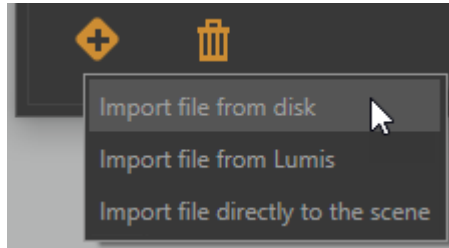

NOTE

Depending on the database weight, the import can take several seconds.

The default address provided for the Lumis 3D server is <https://lumis3d.lumiscaphe.com/>. However, you can change it with your own domain name by clicking on this

icon  : **Advanced system settings > Pilot > System configuration > Lumis.**

You can then add your selection of files (product and/or layout) to the scene by clicking on the **Open** button.



TIP





To select and open multiple files (product and/or layout) at the same time hold the key **Shift** or the key **Ctrl** of your keyboard.


If you choose to import a file from Lumis 3D you will be prompted to identify yourself to sign in to Lumis 3D by using your login details. Browse the content of Lumis 3D to select the file you want to import, double click to open it (or single click on it, and then **Open**).



Duplicate

Duplicates the selected product (s).

Icon	Action	Description
	Delete	Deletes selected product(s) in View.
<div style="background-color: #e0f2f1; padding: 10px; border-radius: 5px;">  TIP To select and open multiple files (product and/or layout) at the same time hold the key Shift or the key Ctrl of your keyboard. </div>		
	Delete all	Deletes all products at once.
	Save layout	Save your scene layout in KPL format.


 **NOTE**
Notions on the layout of a scene.

 To load multiple products in the viewport, start by opening the first product from the list. This product becomes the main product, or "master" product. Choose as the "master" product the one with the environment and post-processing attributes that you want to apply to your scene. Regardless of the opening order, you can freely modify the "master" product in the list by selecting another: the gray checkmark turns orange .

The **Scene** tab consists of four accordion menus.





Configuration


The **Bookmarks** allow you to run and combine different configuration options.

 **TIP**
 Your database must contain configuration bookmarks set up prior to export and created in the **Library** tab of the **Create Configurations** editor in Patchwork 3D

Timelines

The **Timelines** allow you to animate your model with different data prepared in advance in Patchwork 3D.


Icon	Navigation mode	Description
	Go to start	Starts the animation in reverse mode.
	Play	Plays the animation.
	Pause	Pauses the animation.
	Stop	Stops the animation.

Icon	Navigation mode	Description
	Loop	Repeats the animation in a loop.

It is also possible to control the animation with the cursor.



Transformation

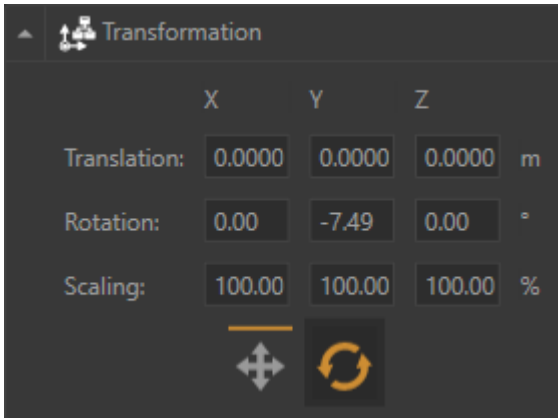
In this section you can position, resize, and configure the instance of your product in the 3D View with the X, Y, Z axes.



The **Transformation** accordion menu

Cameras

This section allows you to display camera bookmarks and, add new ones by clicking on this icon . You can also edit  each camera bookmark you have created in Accel VR by renaming them and changing their position.

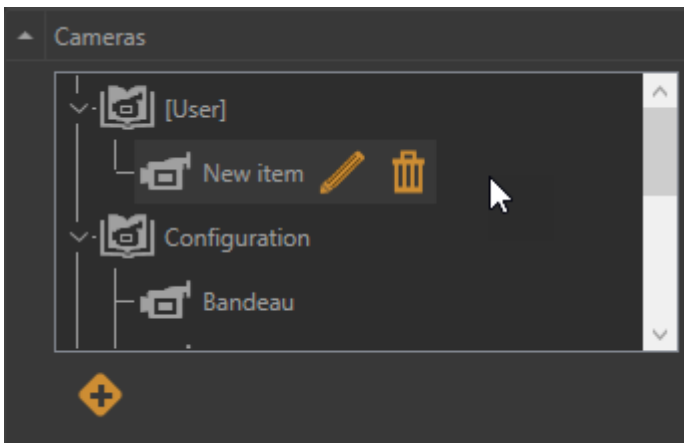

The **Cameras** accordion menu with a camera bookmark created by the user.

Tools tab







NOTICE

All the features described below may not be present in your software edition: Community, Premium, Essential, or Enterprise.

The **Tools** tab lists the manipulators used by your device according to the license you purchased.

Interest point management

The interest point tool allows you to point an area that you need to focus on like a pointer during a slide presentation.

By expanding the menu  you can directly select the area you want to draw the audience's attention using the eyedropper , or delete the point of interest with . You can also adjust its **Size** and **Opacity** from this icon .


Measure tool management

The Measuring Tools shows the distance between two points that you have chosen. This distance between these two points may thus be represented visually in the active view.

With the accordion menu  you can directly:

- measure a length between two points
- calculate an angle

Measure a length

1. Click on the eyedropper  and select your starting point (Point A) in the viewport.
2. Then click on the endpoint (Point B) to measure the length between the two points
3. The result is displayed directly in the viewport or in the field named **Length AB**.




NOTE

If you want to measure another length, just click the eyedropper again to restart the procedure described above.

Calculate angles

The option **Compute angle** allows you to display the value of an angle between two segments. To measure an angle, do the following:

1. Check **Compute angle**, the fields **Length BC** and **Angle ABC** appear.
2. Click on the eyedropper  and select the starting point (Point A) in the viewport.
3. Then click on the intermediate point (Point B) to measure the length between the first two points (**Length AB**).
4. Click on the endpoint (Point C) to measure the length between the intermediate point and the endpoint. You automatically have the length of the second segment (**Length BC**) and the value of that angle (**Angle ABC**).

**TIP**


Repeat the procedure from point 2 each time you want to measure an angle.


The **Measurement tools management** tool gives you the following information:

- the coordinates of each point
- the length of each segment
- the value of the Angle ABC

 Turntables

Turntables simulate the rotation of one or more products on a turntable. For example, they make it possible to visually compare several configurations of the same product from different angles.

In the accordion menu  you can directly control turntables by selecting the rotation direction (clockwise and counterclockwise) or pausing the animation. It is also possible to change the rotation speed with the dedicated slider **Speed (rpm)**.


From this icon  you can adjust the **Product Spacing**, adjust the quantities **+** and **-** of the products you want to add to the scene, and view the turntable(s) by clicking on **Start**.


**NOTE**

The rotation is performed only along the axis of the rotation which is specific to the product.

 Snapshot management


The snapshot tool allows you to snapshot a scene in VR according to the operator's point of view.




You can directly capture the viewport by clicking on the **Snapshot** button in the accordion menu .


Click this icon  to select the folder in which the snapshots will be saved or to set the dimensions of the snapshots while the **Snapshot FOV** sets the point of view angle.


 Clipping planes management


The clipping planes tool allows you to section the object of the scene in a pre-designated plane to see its interior. Active clipping planes are visible in all open View and will clip through all products.

With the accordion menu  you can directly:

- show (**Active**)  or hide  the clipping planes.
- move  clipping plane(s) depending on the chosen X, Y, Z axis.

- rotate  clipping plane(s) depending on the chosen X, Y, Z axis.

Click on this icon  if you need to refine the settings of the clipping planes: grid steps, color, thickness, etc...

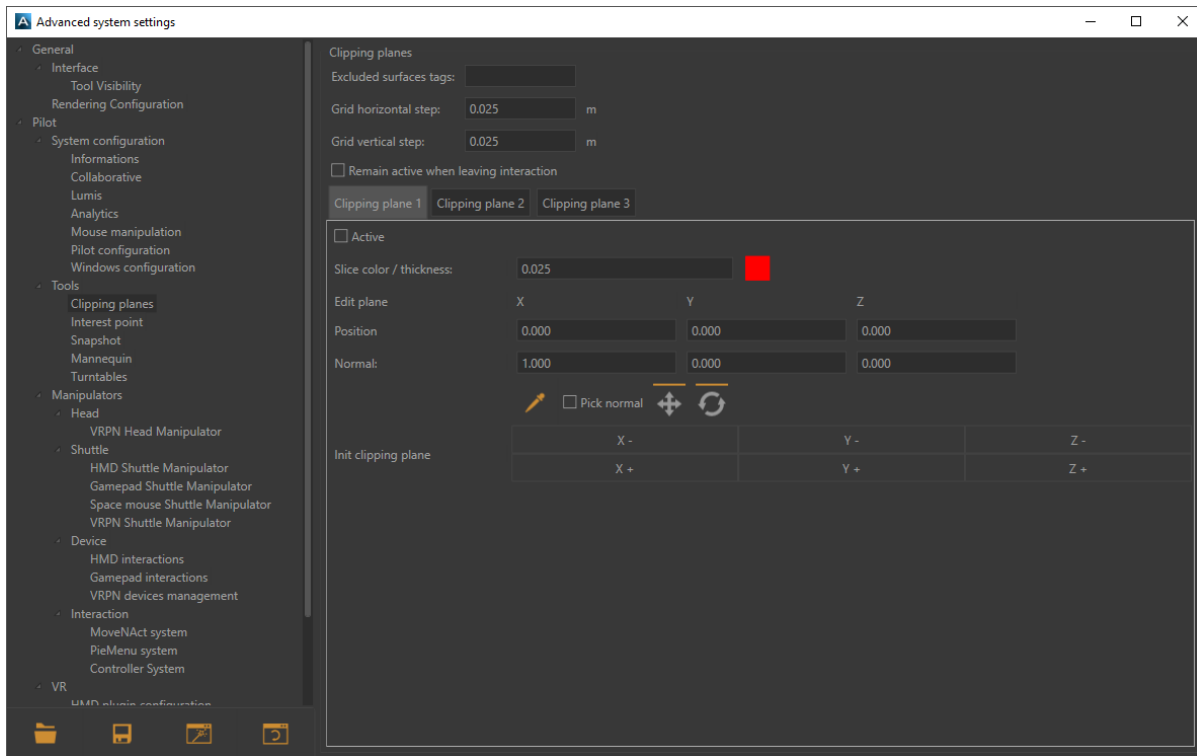

Clipping Planes Advanced Settings Window.



TIP

Tags used in Patchwork 3D to exclude surfaces from the clipping planes must be titled the same way in Accel VR.

For more information, please refer to the **Clipping planes (Editor)** chapter in the Patchwork 3D documentation. Accel VR excludes by default the label with the title **NoClip**.



NOTE

Clipping planes are positioned in the world. Consequently, moving a product in the world will not move the plane. The position at which the plane clips the product will be modified.

You can set the horizontal spacing (**Grid horizontal step**) and the vertical of the grid (**Grid vertical step**) by entering values or using the up and down arrows on the keyboard.

Accel VR Pilot allows you to manage and display three clipping planes simultaneously.

Check **Remain active when leaving interaction** if you plan to combine the use of clipping planes with other interactions.



TIP

Make sure the **Active** box is checked to display a clipping plane.

However, you can exclude certain surfaces from the clipping planes by entering in the **Excluded surfaces tags** field the surface tag you want to exclude. If you have several surfaces to exclude use semicolons between each tag.

You can choose the color of the slicing-edge and modify the **Slice thickness** of the line by entering a numerical value, or by using the up and down arrows of the keyboard.



Selects a point of the surface in which the clipping plane passes through the surface that you want to section.



Clipping planes example with 1 section




Clipping planes example with 2 sections

Links

 


TIP


By default, the **Links** tool is not visible in the tab **Tools** from the Accel VR side panel. To make it appear, just click this icon  and follow this path **Advanced system settings > General > Interface > Tool Visibility**.

The **Links** tool allows you to link a tracker to one or more products. With this feature, you can imagine moving a product naturally according to the movements of your members for example.

You can select and configure the trackers listed in the **Trackers** box by expanding the accordion menu






Follow these steps to link a tracker to one or more products.

1. In the **Links** window, select the tracker from the list.
2. Then with the eyedropper  pick the reference point onto the product. This allows you to link the tracker to the product.



NOTE

To link a tracker to multiple products, restart at step 1 (describes above) by using the same tracker but by selecting a different product at step 2.

At any time you can break the link from the tracker to the product by clicking on this icon . Use the translation gizmos  and rotation  if you need to change the reference position of your link.

Product Mesh Collider



WARNING


Only available with a CAD Tools license option.

The **Product Mesh Collider** is used to display the intersections between products when they collide.


When the **Include avatars in the A group** box is ticked, the avatars (head, controllers, hands) are included in group A for the calculation of collisions.

When the **Product Mesh Collider** is activated (**Activate**) you can set the collision behavior. The algorithm used requires dividing the products of the scene into two groups A and B. For each product, the collisions with all the products of the other group will be calculated. Collisions between two products of the same group are not calculated.

- By selecting **Surfaces** you will visualize **the intersection of the surfaces of product A with the surfaces of product B**, an intersection line of the color of your choice appears.
- By selecting **Volumes** you will visualize **the intersection of the surfaces of product A within the volumes of product B**, a plane of the color of your choice appears.

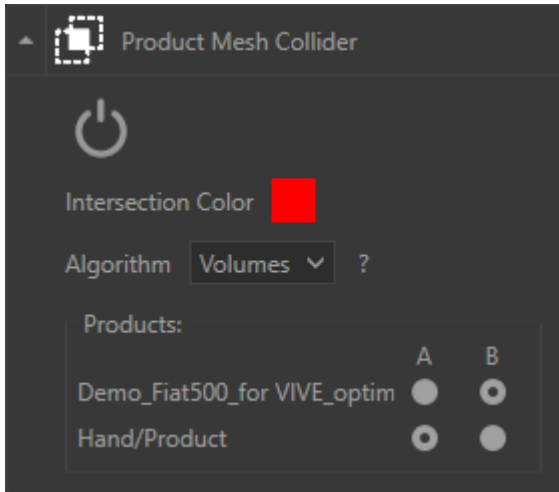

Here the **Product Mesh Collider** is set up with a red intersection using the intersection algorithm **Volumes**.

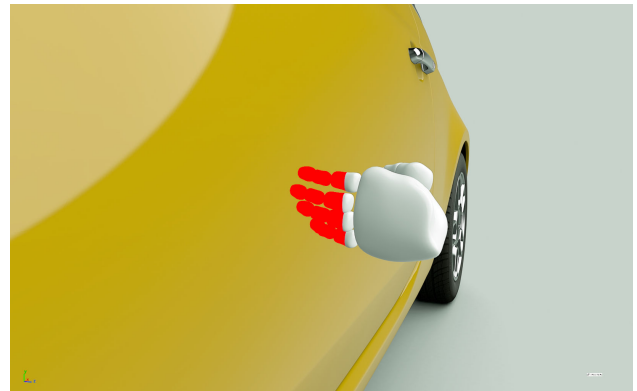


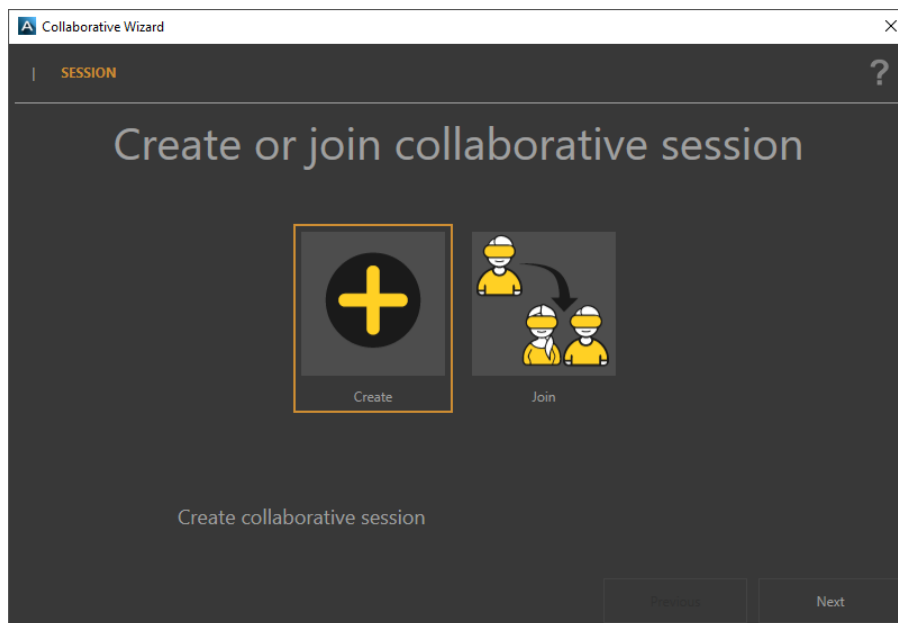
Here's the result.

Collaborative tab


The **Collaborative** tab allows you to create or join a collaborative session to do design and engineering reviews with remote collaborators. We can imagine a session to validate the atmosphere of a vehicle, for example.


Create a collaborative session

1. Click the button  to start a collaborative session. In the window that appears select **Create** and click **Next**.



Configuration wizard to create a collaborative session.

2. In the second window, select **Local** from the drop-down menu in case you want to host the session, or click on the button  to host the session on a server. To do this, fill out the **Host address** and the **Host name**.

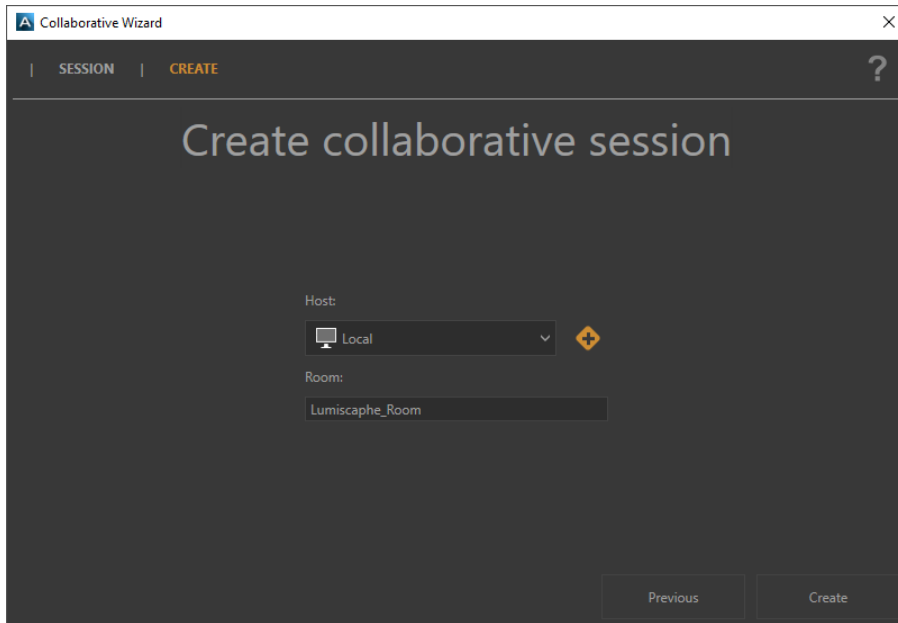

Example of the configuration of a collaborative session hosted locally.

Name the **Room** and click the **Create** button.


- If the connection is successful, the status **Connected** will appear in green which means you can continue the configuration wizard by clicking on the **Next** button.
- If the connection is not successful, the **Session not available** status will appear in red. Until the connection is established you will not be able to continue the wizard.



TIP


You can rename the host name from the **Advanced system settings** via the following path: **Pilot > System configuration > Collaborative**.

3. If you opened a database before launching the Configuration Wizard, Accel VR will then ask you to select or not a scene.

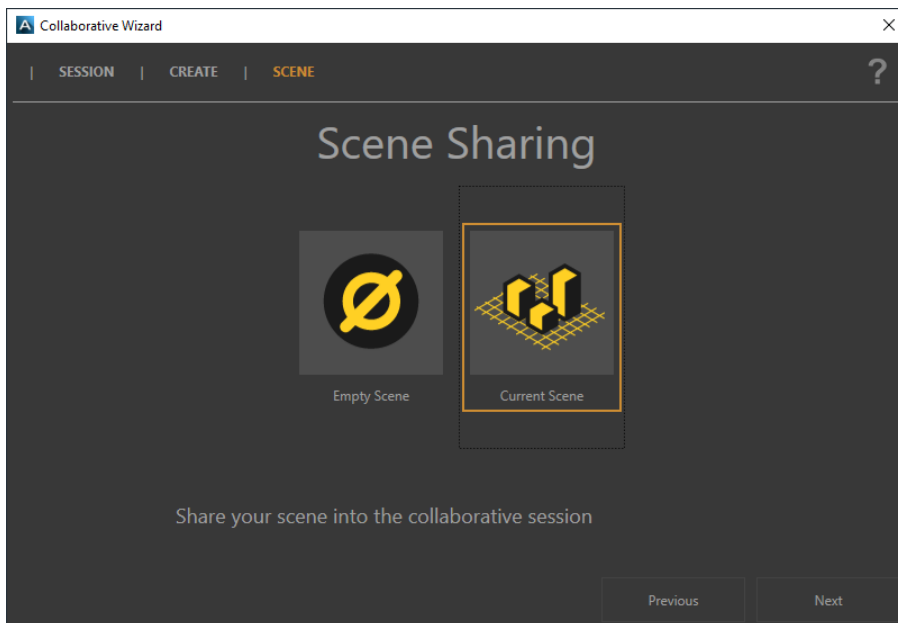


Example of the configuration of a collaborative session with the sharing of a scene.

- Then select the product to share.

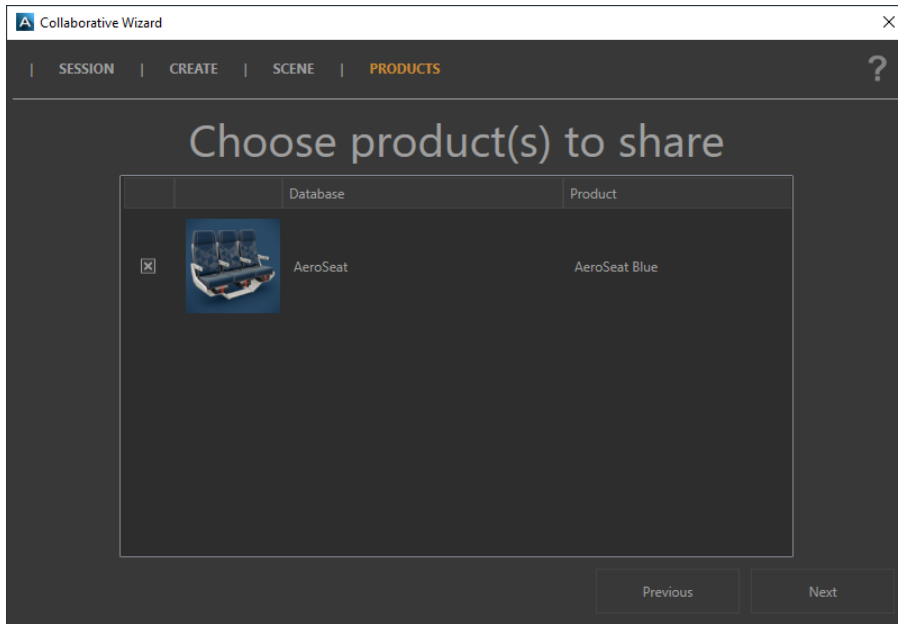


Example of selecting a product from a scene.


- In the next window of the wizard, copy the connection information to share it with your collaborators and click on the **Close** button.

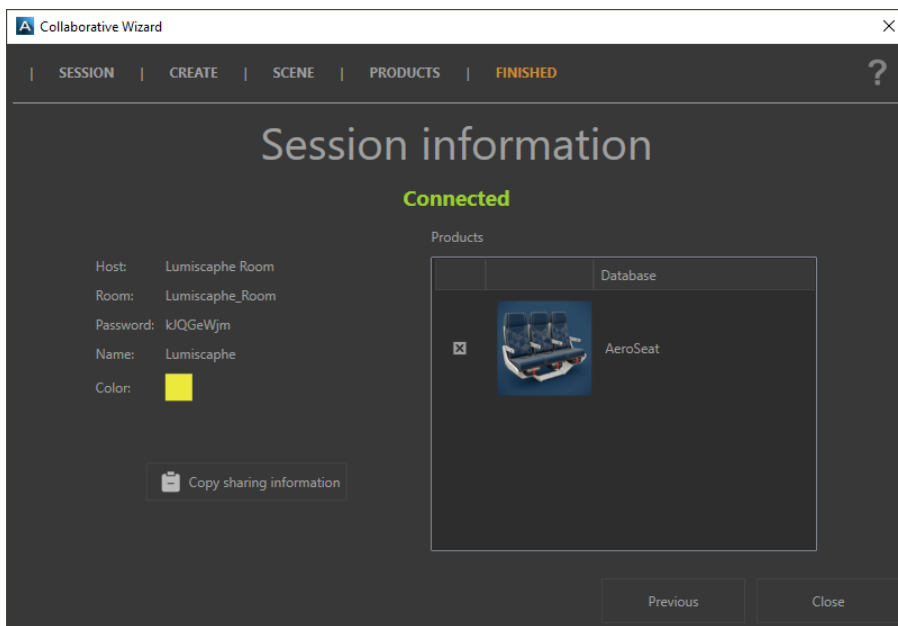


Example of the information to share with the collaborator who will participate in the collaborative session.

Join a collaborative session

- Click the button  to start a collaborative session. In the window that appears select **Join** and click **Next**.

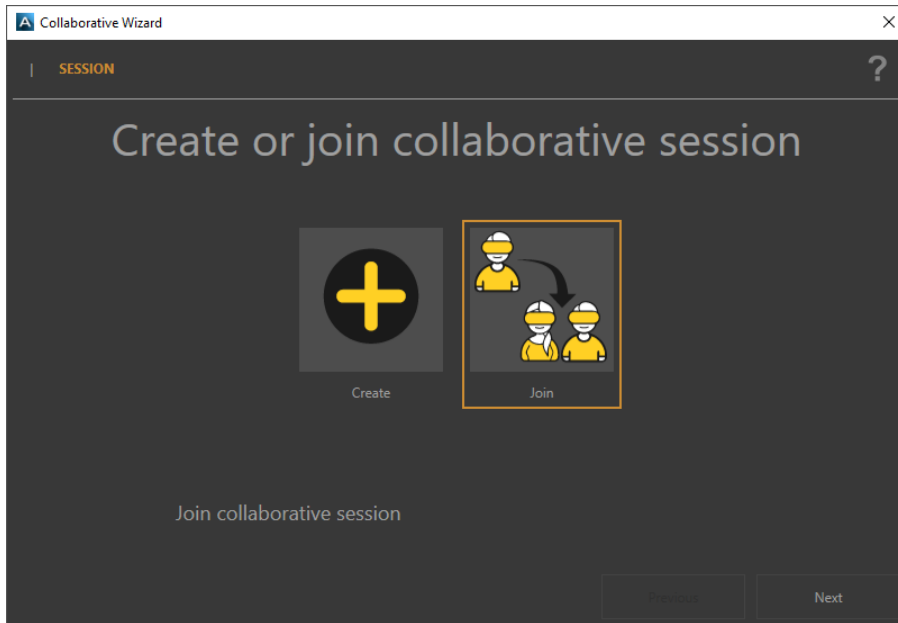


Example of configuration to join a collaborative session.

- In the second window, click , select the host type **Server** or **Computer**, then add the host information corresponding to the address and the name of the session information shared by the session organizer. Click on the button **Create** to finish.




NOTE

By default, Accel VR copy information filled out in the **Host address** field to name the **Host name**. You can rename the host based on information shared by the session organizer.

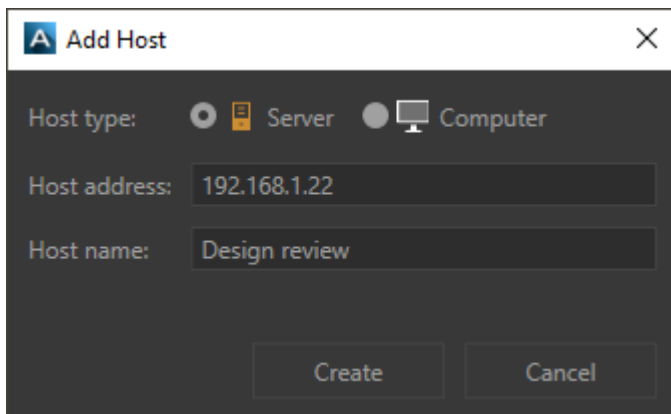

- Back to the configuration window to enter the **Password**.

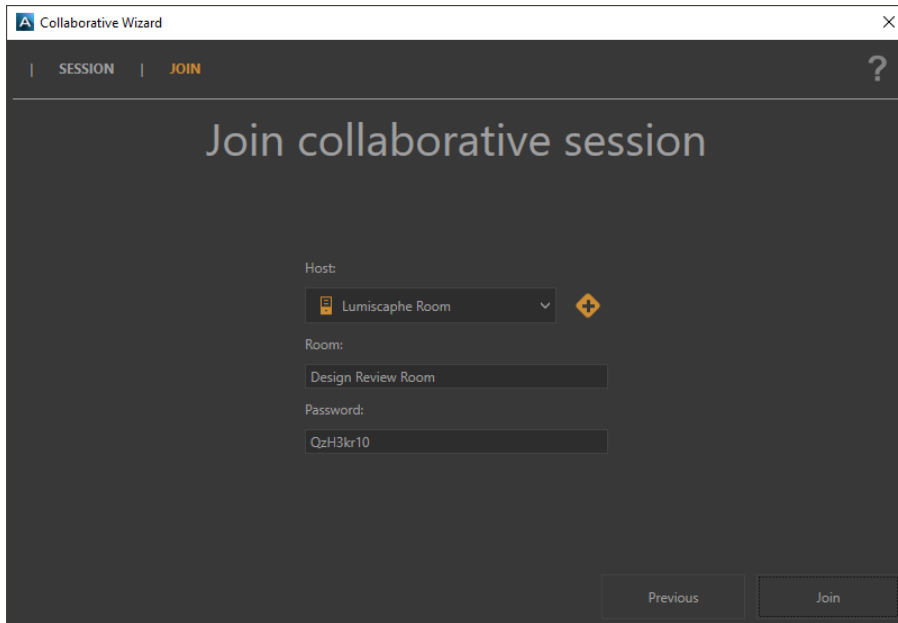

Example of session information requested to join a collaborative session.

Click to **Join** to join the collaborative session

- If the connection is successful, the **Connected** status will appear in green and you can continue the configuration wizard by clicking on the button **Next** button.
- If the connection is not established correctly, the **Session not available** status will appear in red. Until the connection is established you will not be able to continue the wizard.

4. If the connection is successful, click **Close** to finish setting up the collaborative session.


Collaborative session information

When the session connection is established, Accel VR displays the following information in the side panel:

- the local information: **Address, Name, Color** -which is directly editable- and the **Avatar**.






NOTE

Accel VR randomly assigns a color for each added collaborator to identify them in the scene. However, its color but also its name, and its avatar can be modified from the  **Advanced system settings**.





Example of the color change of the Hands avatar tracked by the Leap Motion system.

- the session information: **Host, Room, Password**.
This information can be copied to the clipboard and shared with collaborators you want to participate in the session.
- the information on the collaborators connected to the session.
Accel VR can automatically display available peers over the network.
Click on this icon  to choose each pair you want to use. The icon of the selected window turns orange  to inform the user that the window has been added to the list. The question mark  then disappears. You can now close the window of the **Advanced system settings**.



NOTE

This icon  means that the shuttle window has not been added to the list yet. She is unknown. This icon  means that the calculation unit dedicated to the shuttle window is not available on the network despite the fact that it has been added to the list.

VR tab


The VR tab consists of different accordion menus depending on the selected preset device.

From the drop-down menu select the device configuration preset you will be using. By default, Accel VR uses the **Simplified** preset which is especially recommended for most virtual reality headsets. This preset has been specially created for Accel VR users who want to quickly start an immersive experience without worrying about settings. This is why all presets are not editable. The **Headset** preset has the same operation as the **Simplified** one but has additional rendering options to check or uncheck. The **Cave** preset display its own settings while the **Custom** preset displays the preset of all devices.



TIP

You will find detailed setting options for your device later in this chapter.

By clicking on the icon  you can individually configure manipulators of your immersive device in a simple or advanced way.

- **Head manipulator**

To understand the operation of the head manipulator and configure it, please refer to the [Head manipulator \[50\]](#) paragraph of the **Advanced system settings**.

- **Device manipulator**

To understand the operation of the device manipulator and configure it, please refer to the paragraph [Device manipulator](#) of the **Advanced system settings**.

- **Interaction manipulator**

To understand and configure the interaction manipulator, please refer to the paragraph [Interaction manipulator \[50\]](#) of the **Advanced system settings**.

- **Shuttle manipulator**

To understand the operation of the shuttle manipulator and configure it, please refer to the paragraph [Shuttle manipulator \[55\]](#) of the **Advanced system settings**.

Device presets can be selected from the **Advanced system settings**. Please refer to the chapter on [Advanced system settings \[45\]](#) for more information.




HMD management



NOTE

This drop-down menu only appears with **Headset** and **Custom** presets.

To optimize the rendering and the fluidity of the display in your headset, you can check or uncheck the parameters available from the drop-down menu :


- **Render in HMD**

By default, the rendering display is projected in a virtual reality headset. But you can choose not to display it to relieve the system in the rendering calculation by unchecking this box.

- **Render mirrors in HMD**

- **Render post-processes in HMD**

- **Render enhanced bump in HMD**


From this icon  you will find the above rendering parameters as well as the operating status, model, and manufacturer of the device, plus the following parameters.

The **Rendering Mode** allows you to select the appearance of your product:


- **Material** displays product textures,



- **Color** displays a different color for each surface used by the product,

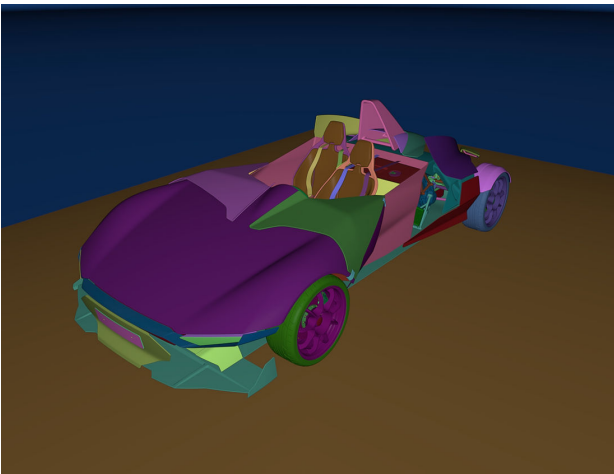

- **Lightmaps** display the lighting rendering of the product.

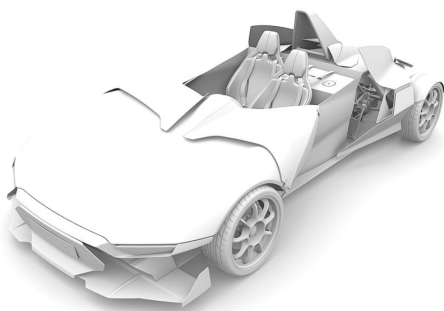

The **Eye separation** is initialized with the default value of the headset, however, this value can be modified in the dedicated field.


The **HMD render scaling** slider is useful for zooming out the world so that your model fits the dimensions of the screen of the VR headset.







Windows




NOTE

This drop-down menu only appears with **Cave** and **Custom** presets.

From the drop-down menu  you have access to the following features to render on your device.

Icon	Action	Description
	Hide rendering window units	Hides the window of each rendering unit (gray icon) to configure their graphics card for example.
		 NOTE The window for each rendering unit is displayed by default.
	Unit windows always on top	Keeps the windows of the rendering unit in the foreground among all the windows of the Microsoft Windows® operating system.
		 NOTE Disabled by default.
	Eye	If the display of the eyes is reversed by a projector (frequent with certain stereoscopic configurations), click on to switch between the left and right displays.
		 NOTE Disabled by default.

Click on this icon  to open the windows rendering configuration of your device in the advanced system settings (**Windows configuration**).

Please refer to the chapter titled [Windows configuration \[49\]](#) to set up rendering in your device.



VRPN devices management



NOTE

This drop-down menu only appears with **Cave** and **Custom** presets.

The VRPN device management allows you to add, configure, and delete a VRPN device.


Accel VR supports ART, VICON, and NaturalPoint tracking systems.

Accel VR Pilot establishes the link between the render units and the trackers, gamepads, etc ... The connection is made via a local server.

Install ART or VICON equipment according to the manufacturer's recommendations. Accel VR Pilot 2020.1 must be linked with the machine on which the VRPN server of ART or VICON is installed.

The important parameters to remember from a VRPN server are: its IP address, the main tracker name (in the case of tracked glasses), and its index.

The VRPN server must receive information from the tracker(s) (please refer to the manufacturer's user documentation).

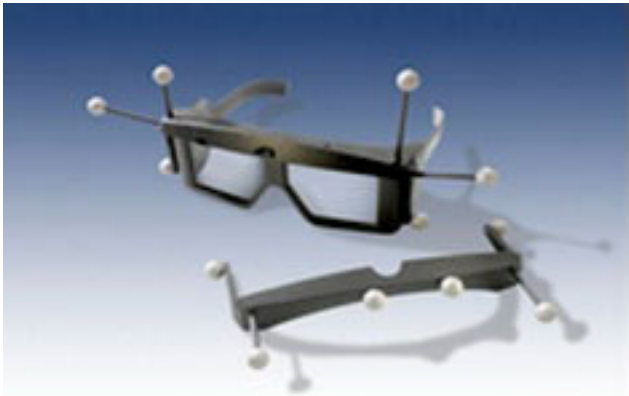


3D glasses

To use peripherals allowing navigation in the 3D scene (Logitech® controllers, Xbox 360® controller for Windows®, etc.), simply connect them to the machine on which Accel VR Pilot 2020.1 is running and install the peripherals drivers. A space mouse may also be used too.




SpaceMouse® Pro


This icon  opens the VRPN device plugin settings window.

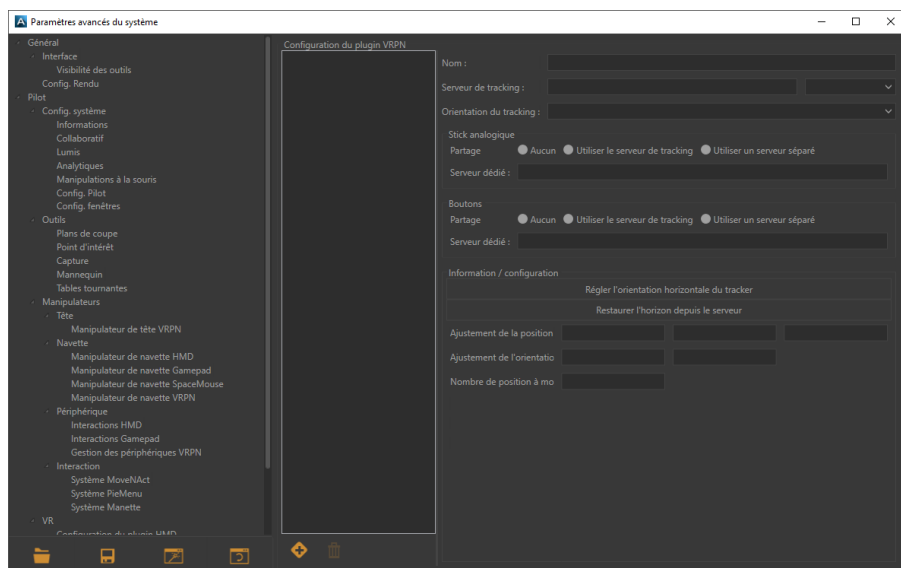

VRPN Manager

VRPN Manager consists of two parts:

- The left part to add  or delete  a VRPN device.
- The right part to configure a device.

Please refer to the manufacturer documentation of the selected device to know the IP address of the **Tracker Server**. The following drop-down menu  provides to Accel VR Pilot by VRPN protocol the current position of the tracked devices. The digit represents the sensor ID of ART tracking systems. It is normally worth **0** with Vicon systems.

Select the tracker orientation with the following arguments (**Y_UP, Z_UP_X_LEFT, Z_UP_X_RIGHT, Z_UP_Y_LEFT, Z_UP_Y_RIGHT**) depending on the manufacturer specifications. If the Y_UP convention is not used by default by the tracking system, data provided will be converted by the tracking framework.

If your VRPN device has an analog stick or buttons, the **Analog-stick** and **Buttons** boxes will allow you to configure them. Select the **Use tracker server** radio button if your device is communicating on the same tracking server configured earlier in the VRPN manager. If, on the contrary, the VRPN device does not have an analog stick and buttons such as tracked glasses, select **None** in both boxes.

In case your device does not communicate on the same tracking server, you then need to associate an analog stick or buttons on a separate server. To do this select the button **Use a separate server**. Then enter the server address in the field **Dedicated server**.

The box **Information / configuration** allows you to adjust the horizontal orientation of the device and make adjustments regarding its positioning in space thanks to the fields **X, Y, Z** coordinates.




Calibration management




NOTE


This drop-down menu only appears with **Cave** and **Custom** presets.

Expand the accordion menu  and then click the **Correct trapezoid** button to calibrate the projection areas of the CAVE.

See details in the [Operating principles \[15\]](#) chapter to understand how Accel VR works with a CAVE.

1. In the toolbar click on this icon  to display the rendering in your immersive system.
2. Then click **Start warping** button.


A test pattern is projected by all render units in the system.

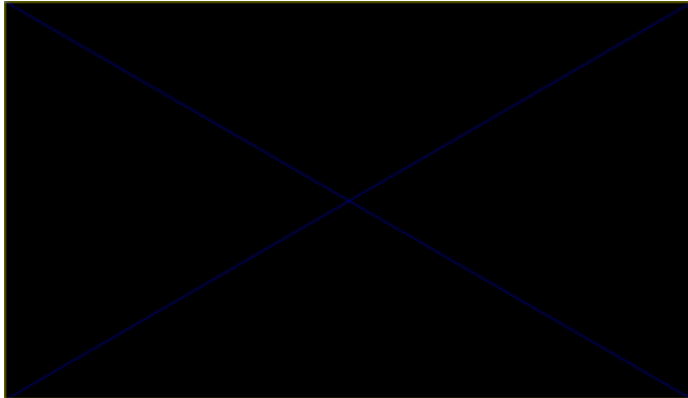

Sample test pattern projected during the calibration procedure for the projection areas.

3. On each unit, proceed as below (assuming you will use a gamepad for the calibration process): Press **A** button of the gamepad to configure the bottom edge. Using the joystick or the paddle (for the pixel precision) of the gamepad, reposition this edge so that its projection overlaps the bottom of the corresponding screen. Then press the **B** button on the gamepad to select the lower right corner and repeat the setting to place the corner so that its projection overlaps the bottom right of the corresponding screen.
4. Do this for all corners and edges that require adjustment in the order of the buttons shown in the table below.

A	B	B	Y	Y	X	X	A
Lower edge	Lower right corner	Right edge	Upper right corner	Top edge	Upper left corner	Left edge	Lower left corner

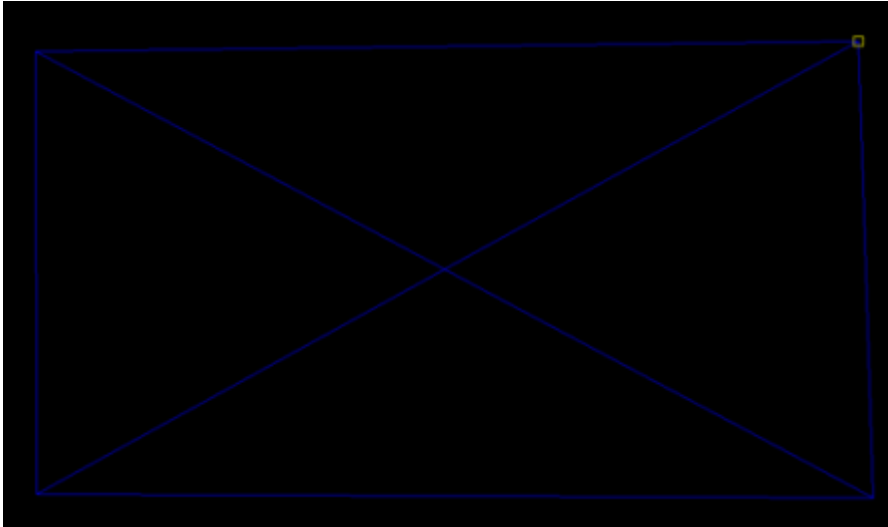

Positioning the upper right corner with the joystick of the gamepad.

When an image is rendered, Accel VR will distort it to compensate for the keystone projection resulting from the position of the projector. The model's normal proportions will be restored in the projection areas.

Areas outside of the test pattern will always be displayed in black to restrict the projection to the intended screen.



NOTE

Accel VR saves the configuration of the **Calibration Projection Areas**. However, you can change the calibration at any time by repeating steps 4 and 5.



Proximity warning management




NOTE

This drop-down menu only appears with **Cave** and **Custom** presets.

In an immersive system using walls, the observer is often unaware of the edges of the observation area and of the placement of the screens. To prevent the observer from running into the screens, a proximity warning is available.

From the drop-down menu  you can directly activate or deactivate the proximity warning option.

It is possible to modify the default settings of the proximity alert such as its **Minimum distance**, its **Maximum distance** or its **Color** by clicking on this icon .


The proximity warning colors the display and shows a grid with the color of your choice whenever an obstacle (the screen) is detected within a defined zone around the observer's head (**Minimum distance** and **Maximum distance**). This zone is defined in terms of the distance from the center of the observer's head.

Canon MREAL management



WARNING


The Canon MREAL headset is only available in Japan and on request.

To optimize the rendering and the fluidity of the display in your headset, you can check or uncheck the parameters available from the drop-down menu  :

- **Render in HMD**

By default, the rendering display is projected in a virtual reality headset. But you can choose not to display it to relieve the system in the rendering calculation by unchecking this box.

- **Display Canon MREAL background**

From this icon  you will find the below rendering parameters as well as the operating status, model, and manufacturer of your device, plus the following parameters.

- **Render mirrors in HMD**

- **Render post-processes in HMD**

- **Render enhanced bump in HMD**


- **Display Canon MREAL background**


When the parameter is activated, it displays the headset image which is the augmented reality instead of the product background.

- **Display hands**


Canon MREAL technology recognizes and scans the hands of your body so that they are directly displayed in augmented reality. If the parameter **Show hands** is activated. Accel VR redraws the hands in the foreground with a color of your choice (parameter: **Hand color**). A specific tracker is required for the Canon MREAL to work correctly in augmented reality.


Advanced system settings

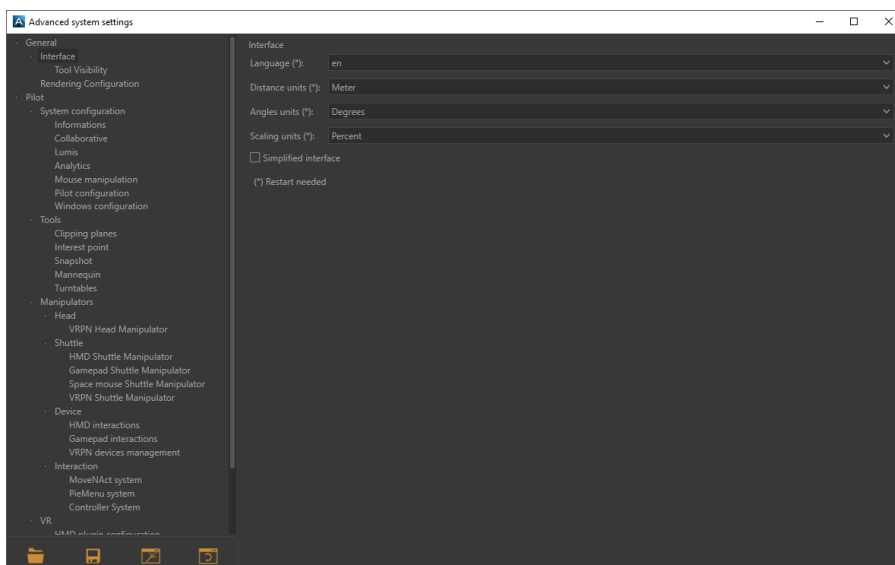

The window of  **Advanced system settings** helps you configure secondary Accel VR settings.



Advanced system settings window

It is possible to export the settings in JSON file format to share them, for example, with a collaborator or to simply save them to reuse them later. To do this click on this icon  which is located at the bottom left of the **Advanced system settings**.

It is also possible to import settings in JSON or XML format for versions prior to 2021.1 by using the following icon .

At any time you can restart the configuration wizard to add and configure a new device. To do this, click on this icon . It is also possible to restore the last configuration of the wizard parameters by clicking on the following icon .



TIP

Please refer to the [Configuration Wizard](#) section to configure your immersive device with Accel VR.

General

Interface

This tab allows you to configure Accel VR global settings:

Setting	Default value	Definition
Hardware anti-aliasing	4	Allows to smooth the rendering. The maximum value can be 8.
Language	en	Allows you to change the language to another one.
Distance units	Meter	Allows you to change the distance units (centimeters, millimeters).
Angle units	Degrees	Allows you to change the angle units (radians).
Scaling units	Percent	Allows you to change the scale units (factor).
VR Preset	Simplified	Allows you to set the VR preset of your device (Simplified, Headset, Cave). This preset is linked with the VR tab [37] of the Accel VR configuration side panel.

Once ticked the **Simplified interface** parameter maximizes the viewport and minimizes the configuration side panel to its minimum so that the user can start an immersive experience without worrying about the settings. It also deactivates all tools and forces the selection of the **Simplified** parameter which uses a VR headset as a head manipulator and the controller as an interaction manipulator.

Tool Visibility

Select here the tools you want to appear in the **Tools** tab of the Accel VR side panel.



TIP

You can also reorder the tools according to your uses by a simple drag and drop.

Rendering configuration

The parameter **Hardware anti-aliasing** or **Multi-sampling** is particularly effective for sharp borders or when there is a strong contrast between the start and end colors of gradients. The higher the default value is, the longer rendering will be.

You can also choose to automatically update the local environment during configuration changes by checking the **Rebuild local environments** option. This ensures a visual coherence of the reflections of geometries, color, and lights in the scene.



NOTE

Enabling this option can cause rendering slowdowns when making configuration changes.

Pilot

Pilot configuration tab

Depending on your needs you can select or unselect the parameters below to improve the rendering performance in the viewport of Accel VR Pilot:

- **Grid**
- **Referential**
- **Mirrors**
Displays the reflections of other geometries in the scene in planar mirrors. This option can greatly increase the number of elements to be rendered in a scene. You can disable it in order to increase rendering fluidity.
- **Post-processes**
- **Background**
- **Overlay¹**
- **Enhanced bump**
- **Display scene gizmos**
- Modify the representation of the model to be displayed in the View (**Material, Color, Lightmaps, Wireframe**)

As needed you can also choose to overwrite your background with one color background or with a gradient background.


Information

You can visualize in the scene your interaction devices as well as those of your collaborators' thanks to the avatar.

Please refer to the chapter describing the operation of the **Collaborative** tab from the Accel VR side panel to add more collaborators to the scene.

Choose simply your immersive device from the list below.

¹An overlay is an image (often a logo) that is applied in two dimensions in front of objects in the 3D world. It does not move when you navigate in the 3D world; it remains stationary relative to the screen.

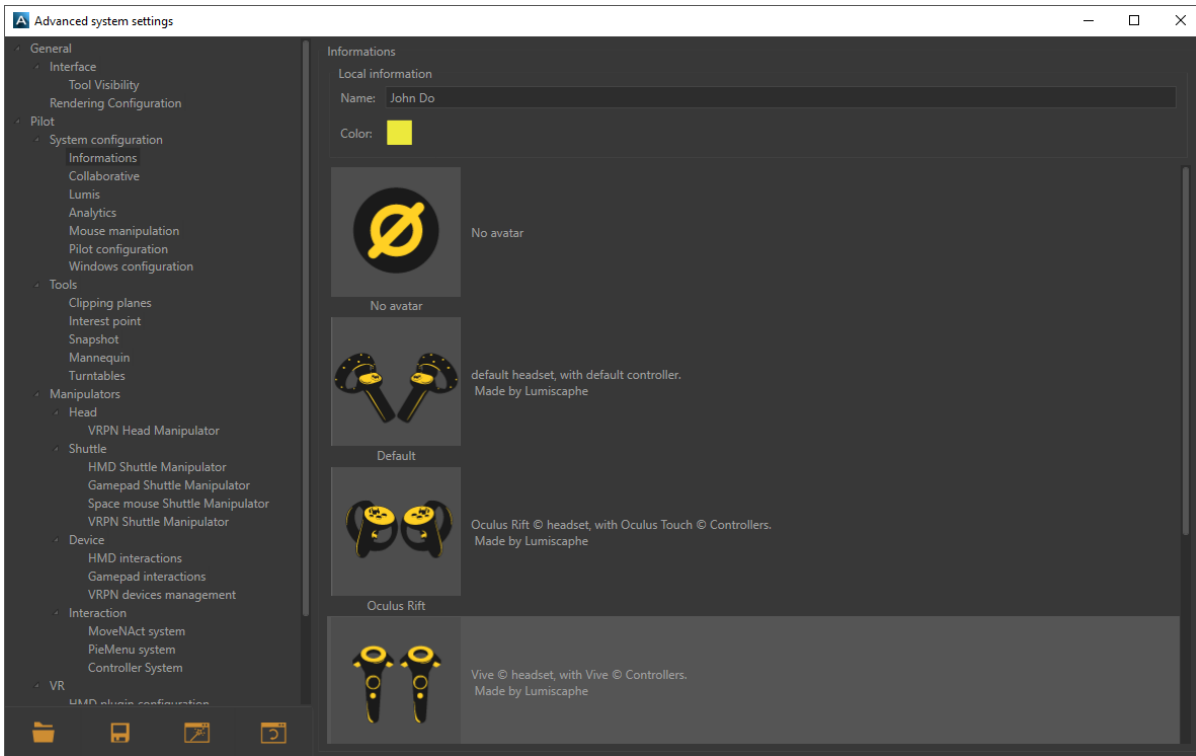


Select your immersive device avatar



WARNING

The **Touch Interaction Manipulator** is only available with the plugin of **Touch Interaction**.

Mouse manipulation

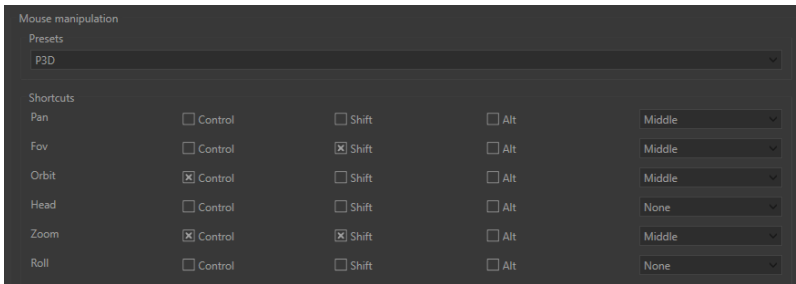

The **Mouse manipulation** settings

You can apply the keyboard shortcuts of your favorite CAD software in Accel VR. These are shortcut profiles named **Presets**.

The **Presets** drop-down menu lists the keyboard shortcuts of the following software:

- 3ds Max
- Alias
- Maya
- P3D (Patchwork 3D)
- SolidWorks
- Custom

If you modify an existing keyboard shortcut profile, it will automatically switch to **Custom**.

Windows configuration

Depending on your needs you can select or deselect the settings below to improve the rendering performance of render units:

- **Mirrors**

Displays the reflections of other geometries in the scene in planar mirrors. This option can greatly increase the number of elements to be rendered in a scene. To save resources this option is disabled by default. You can disable it in order to increase rendering fluidity.

- **Post-processes**

- **Background**

- **Overlay**

2




- **Enhanced bump**

- **Material, Color, Lightmaps, Wireframe** change the representation of the model to be displayed.

- **Overwrite background**

If necessary, you can also overwrite your background with a solid color or with a gradient of two colors. Check the **Overwrite background** checkbox to make your choice.



Accel VR can automatically display the available windows of the shuttle over the network.

Click on this icon  to choose each window you want to use. The icon of the selected window turns orange  to inform the user that the window has been added to the list. The question mark  then disappears. You can now close the window of the **Advanced system settings**.

Back in the accordion menu titled **Windows**, you will then see a brief description of the window (its IP and name) that you just added.



TIP

This icon  means that the shuttle window has not been added to the list yet. It is unknown. This icon  means that the dedicated calculation unit to the window of the shuttle is not available over the network despite the fact that it has been added to the list.

Select manipulators

At the first installation of Accel VR the following drop-down menus **Head, Device, Interaction, and Shuttle** are automatically filled out with the detection of your device.

You can also change the manipulator after the first installation of Accel VR through the **VR tab [37]** of Accel VR.

Manipulators

Please find below the complete list of available manipulators.

²An overlay is a 2D image (often a logo) that is displayed in front of the objects in the 3D world. It does not move when you navigate in the 3D world but remains stationary with regard to the screen.

Head manipulator


The **Head** drop-down menu allows you to choose the manipulator that will control the head.

The head can be controlled by the following devices:

- a virtual reality headset > **HMD head manipulator** (Nothing to configure here)
- a gizmo > **Gizmo Head Manipulator**
Use the **Translation** or **Rotation** tool to move the head gizmo without using a device just by using the mouse. This functionality is very useful for quickly initializing from Pilot the position of the operator's head, that is to say, what he will see.
- a VRPN device > **VRPN head manipulator**
Select the configuration of the device that has already been done in the [VRPN devices management \[40\]](#). That is the name of the tracker and its orientation.

Device manipulator

The **Device** drop-down menu allows you to choose the device that will control the interactions.




- a device that will track the movement of your hands > **Hand tracking interactions**
Select this manipulator if you are using an Ultraleap Leap Motion tracking system.
It is possible to calibrate the Leap Motion tracking system in Accel VR from the  **Advanced system settings** > **Hand Tracking Plugin** with the **X**, **Y**, and **Z** parameters as well as the **Aiming angle**. These settings are useful when the Leap Motion is not center placed from the front of the headset.



WARNING

The **Hand tracking interactions** device manipulator is only available with the Leap Motion plugin.

*Example of an immersion case, here the operator uses the **Hands** avatar to interact and manipulate the model.*

- a gamepad > **Gamepad interactions**
If you have chosen a gamepad as a device, it is necessary to select on which side the interactive menu will appear. For this select **Right** or **Left** in the  **Advanced system settings**.
Head to pad distance defines the position of the interactive menu.
- a virtual reality headset > **HMD interactions**
Click this icon  to open the **Advanced system settings** to configure the interaction behavior of the headset controllers.
Touch zone must be down to interact (Vive) is selected by default to avoid undesirable movements induced by controller touchpad. This feature is useful for an HTC VIVE controller that has a touchpad. On the other hand, uncheck this feature for an Oculus Rift controller.
- a VRPN device > **VRPN interactions**
Click this icon  to open the **Advanced system settings**.
Select the configuration of the device that had already been done in the [VRPN devices management \[40\]](#) in addition to the names of the VRPN left and right instances.

Interaction manipulator

The drop-down menu **Interaction** lets you choose the interactive menu that will help you control interactions.

Interactions can be controlled using the interactive menu and the interaction device called "system":

- **PieMenu**
- **MoveNAct**
- **Controller**
- **Touch Interaction Manipulator**



WARNING


The **Touch Interaction Manipulator** is only available with the plugin of **Touch Interaction**.




TIP

The operating mode of the interactive menu depends on the device used and on the possibility of using one hand (gamepad, Apex in a CELLAR) or two hands (HTC VIVE®, Oculus Rift®, and HP Reverb).

PieMenu System

From the **VR** tab of the configuration side panel, you can access the advanced settings of the **PieMenu** by clicking directly on this icon .

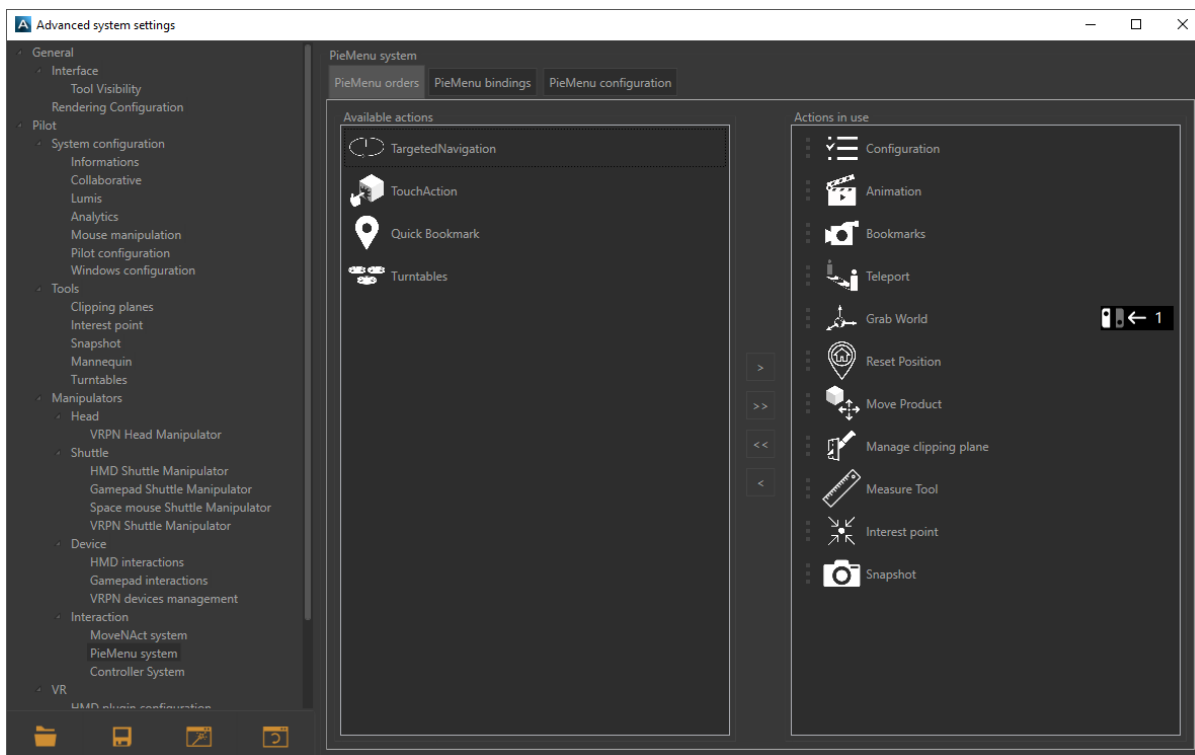

PieMenu advanced settings window.




The Pie Menu tool is configured using the following three tabs:

- The **PieMenu Orders** tab lists available interactions on the left and displays interactions you want to use on the right. To add an available action in the **Actions in use** box, click the arrow [**>**] or [**>>**] to add them all. In order to remove a used action, click the arrow [**<**] or [**<<**] to remove all of them.




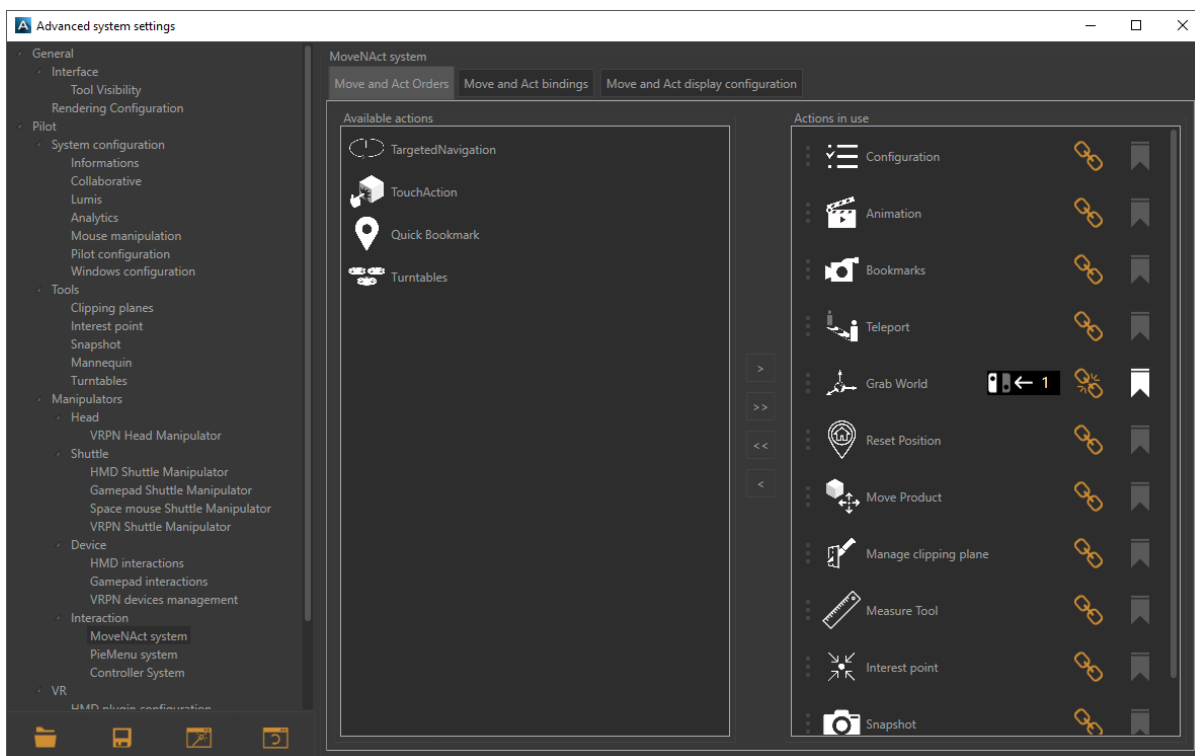
TIP

Make sure there is at least one action in the box to interact with your 3D model. Depending on the interaction selected, the color of the pointer laser may change to indicate to the user that an action is possible.

- The **PieMenu bindings** tab allows you to define an action for each button of the interaction device (gamepad, virtual reality headset controllers, zSpace stylus, etc.). To assign an action to the interaction device click on , then press a button on the interaction device. Accel VR saves the action automatically. If you make an assignment error, click the  button to delete the assignment. Click again  to start the procedure again.
- The **PieMenu configuration** tab allows you to configure the appearance of the interactive menu. Through the **Interaction side** drop-down menu you can assign the action to the left or right hand of your interaction device. **Screen Position** allows you to display the interactive menu on the left or right device of your immersive system. You can choose to display the interactions and the interactive menu on the same interaction device by choosing the configuration **Right** and **Right** in the drop-down menus. On the contrary, you can choose to distinguish the interactions of the interactive menu by choosing **Right** and **Left**. With this configuration, the operator uses the right hand to target an object to interact with it, the left hand is used to display the interactive menu. You can also do the opposite configuration by assigning interactions to the left hand and the interactive menu to the right hand. If the PieMenu is too close to the operator's hand you can move it in any direction you want with the following parameters: **depth, height, lateral move**. You can also change the color of the PieMenu with the following parameters: **Pies back color, Pies text color, and Pies icon color**.

MoveNAct System

From the **VR** tab of the configuration side panel, you can access the advanced settings of the **MoveNAct** system by clicking directly on this icon .



MoveNAct menu advanced settings window.

The MoveNAct system use the followings tree tabs to be configured:

- The **Move and Act Order** tab lists the interactions available on one side and displays the interactions you want to use on the other. To add an available action in the **Actions in use** box click the arrow [>] or [>>] to add them all. Conversely, to remove a used action click on the arrow [<] or on [<<] to remove them all.






TIP


Make sure there is at least one action in the box to interact with your 3D model. Depending on the interaction selected, the color of the pointer laser may change to indicate to the user that action is possible.




This icon enables or disables the immediate assignment of a one-touch interaction. It is a sort of shortcut. Once activated, the immediate assignment executes the interaction directly when the button is pressed. You do not need to use the other device to perform the interaction. This frees the other device and allows you to combine another interaction.




- The **Move and Act bindings** tab allows you to set a move to each button of the selected device. To assign a move to a button, just click on , then press a button on the controller. Accel VR saves the action automatically. If you make an assignment error, click the  button to delete the assignment. Click again  to start the procedure again.
- The **Move and Act display configuration** tab modifies the look of the interactive menu by choosing the color of each element (text, icons). The **Attached side** allows you to select in which hand (right stick or left stick) you want to display the interactive menu. By default, the **Display mode** is set to **World** mode which is suitable for the MoveNAct use with a full-range immersion device such as an HTC VIVE® or Oculus Rift® headset. We recommend the **Screen** mode if you combine the use of the Move and Act in a CAVE or a Powerwall. This makes it easier to use the menu by displaying it in 2D on a remote screen. **Scale factor**, **Menu orientation**, and **Menu translation** are the parameters for changing the size and position of the interactive menu.

Controller System

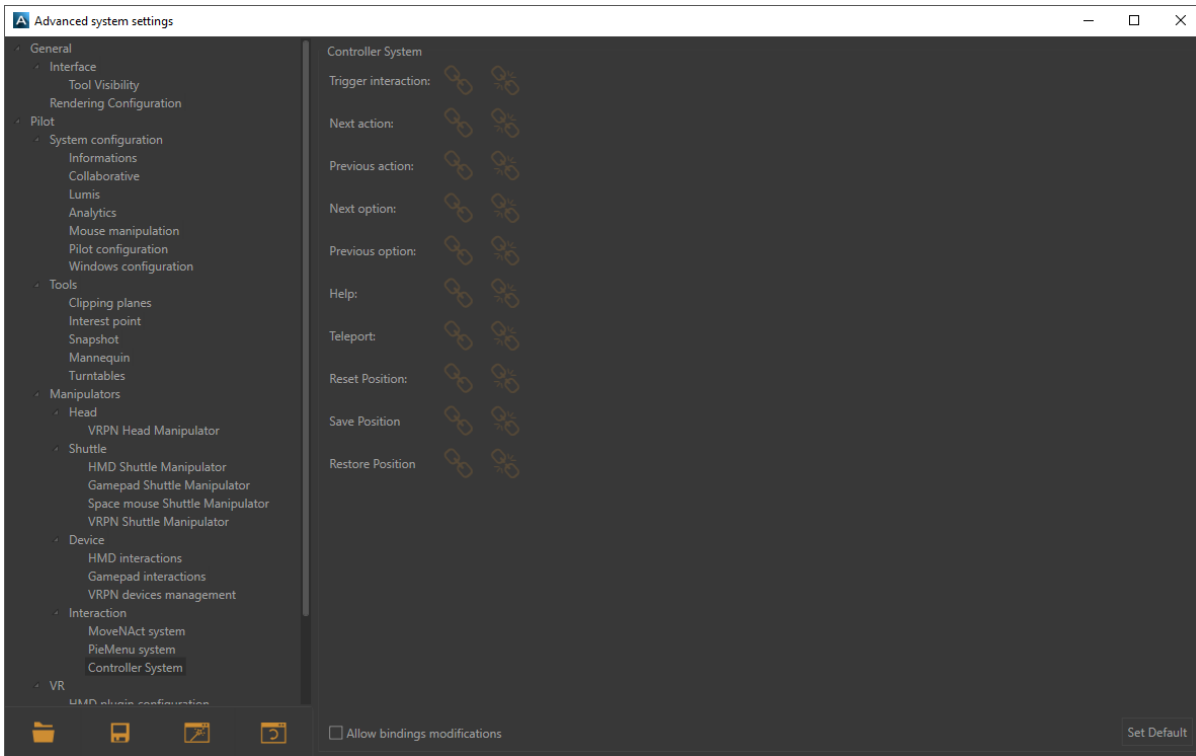
From the **VR** tab of the configuration side panel you can find the advanced settings of the **Controller System** by clicking directly on this icon .




Advanced system settings window of the Controller system.

Assign here the available interactions to each button of the controller. To assign an interaction to a button, click bind , then press the controller button(s). Accel VR saves the binding automatically. To modify an assignment, click on  to unbind it. Click again on  to start the process again.

Touch Interaction Manipulator

From the **VR** tab of the configuration side panel, you can access the advanced settings of the **Touch Interaction Manipulator** by clicking directly on this icon .

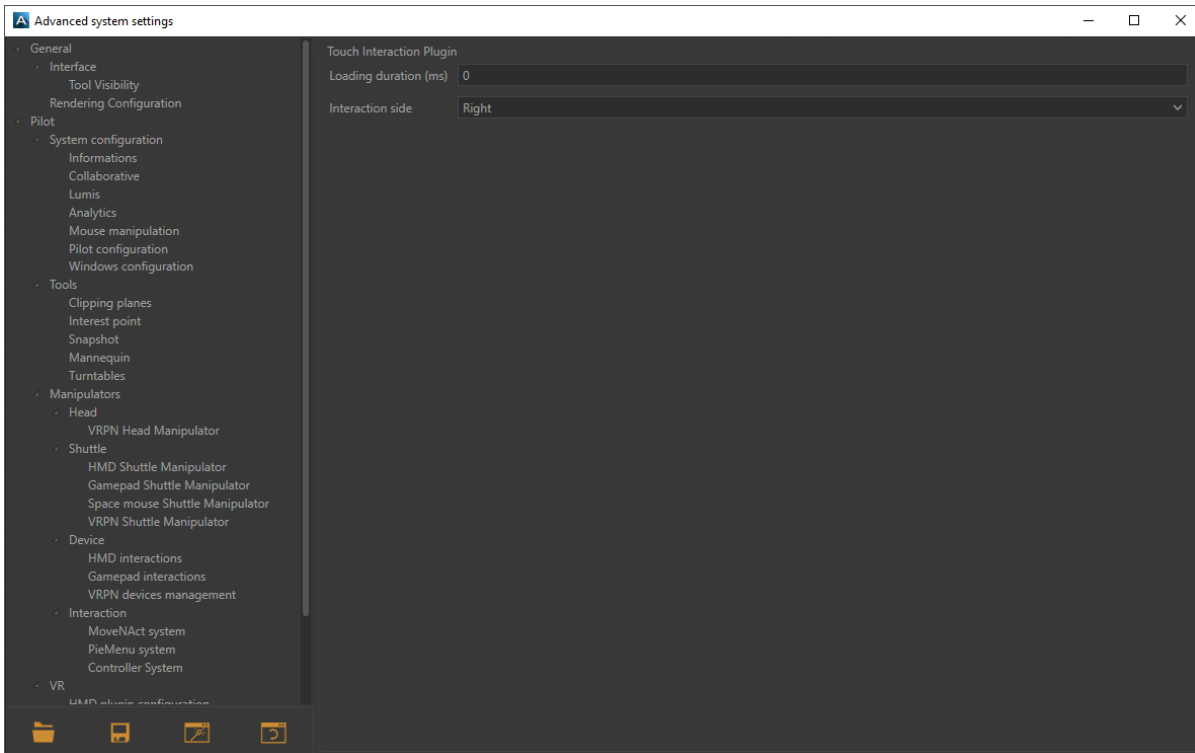

Touch interaction manipulator advanced system settings window.



WARNING

The ***Touch Interaction Manipulator*** is only available with the plugin of ***Touch Interaction***.

To optimize latency-free hand interactions with the objects to be manipulated, we recommend modifying the value of the ***Loading duration (ms)*** to **0**, if not already done. You can choose which side of the ***Right*** or ***Left*** hands will be able to interact with triggers.




TIP

For the best use of the Touch Interaction Manipulator, we recommend placing interaction triggers on small surfaces to avoid unwanted triggers. Triggers must be prepared in Patchwork 3D before being used in Accel VR. You will find more information in [the appendix of this documentation \[68\]](#).

Shuttle manipulator


The ***Shuttle*** drop-down menu allows you to choose the manipulator that will control the shuttle.

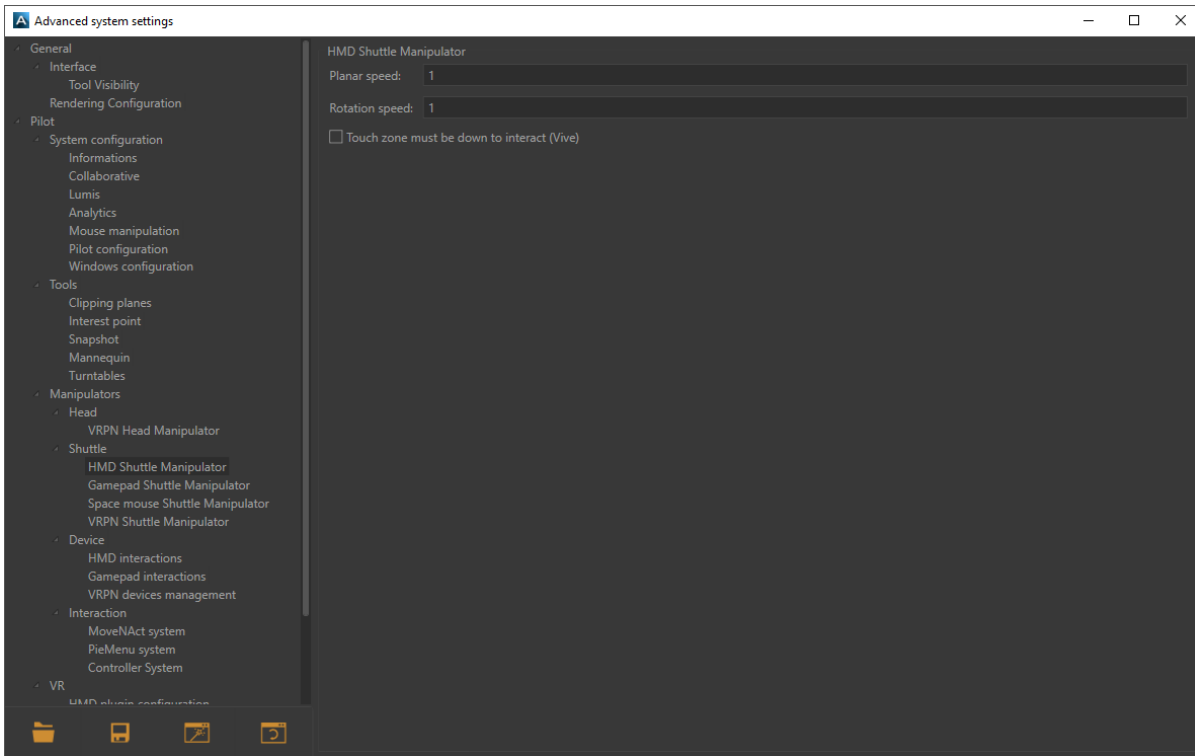

Shuttle manipulator of the Advanced system settings window.

The shuttle can be controlled by the following devices:

- a virtual reality headset > **HMD shuttle manipulator**

You can change the **Planar speed** and the **Rotation speed** by clicking on the following icon . **Touch zone must be down to interact (Vive)** is selected by default to avoid undesirable movements induced by controller touchpad. This feature is useful for an HTC VIVE controller that has a touchpad. On the other hand, uncheck this feature for an Oculus Rift controller.

- a gamepad > **Gamepad shuttle manipulator**


Devices with two analog joysticks such as a gamepad can be used to move the shuttle around the 3D world. One joystick is used to drive movement on the horizontal plane, the other allows you to rotate and move up or down if the altitude is not locked.

The **Lock Altitude** checkbox limits the shuttle movements on the horizontal plane. When this checkbox is ticked, the shuttle's altitude remains stable, despite any modifications to the position of the product. The **Follow look direction** checkbox synchronizes the movements of the head with the direction taken by the exploration shuttle.




NOTE

Lock Altitude and **Follow look direction** are only available for gamepad configuration.

You can change the **Planar Speed**, the **Height Speed**, and the **Rotation Speed** by clicking on the following icon .

- a VR mouse > **SpaceMouse shuttle manipulator**

Configure the advanced settings of your SpaceMouse by clicking on this icon . To manipulate the SpaceMouse Accel VR uses two distinct modes:

- The **OriginFocus** mode moves the shuttle around the center of the world. The **Avoid crossing ground** checkbox prevents the operator to move the shuttle under the ground.
- The **Helicopter** mode moves the shuttle like a helicopter in flight. The movements follow the movements applied to the axes of the SpaceMouse. The **Lock the horizon** checkbox stabilizes the movement of the shuttle by locking the horizon.

In both modes, you can fine-tune the SpaceMouse's movement controls by modifying the movement factors with the sliders: **Movement Speed**, **Rotation speed** and **Dead Zone**.

If your settings are no longer correct, you can reset them by clicking on the **Reset** button.

- a VR device > **Device Shuttle manipulator**

The shuttle manipulator configuration controlled by a device can be done directly from this icon .

The **Options** box allows you to choose the **Interaction side** (left, right), to adjust the **Planar speed**, the **Height speed**, and the **Rotation speed** of the device that will control the shuttle.

The **Bindings** box allows you to assign shuttle movements to buttons on your device. Please refer to the binding procedure described in the [Device manipulator \[50\]](#) section to configure the buttons of your device.

- a gizmo > **Gizmo Shuttle Manipulator**

Use the **Translation** or **Rotation** tool to move the shuttle gizmo without using an immersive device just by using the mouse. This feature is useful for quickly initializing from Pilot the shuttle position in the virtual environment.

CAD Tools

CAD Tools management



WARNING

Only available with a CAD Tools license option.

The CAD Tools plugin allows you to import a 3D model from third-party CAD software and interact in VR directly with it by distorting it, rotating it, moving it, or adding the curves. The changes can then be imported back into third-party CAD software.

- **Environment management**

Choose here the folder where materials are located in order to display them in the interactive menu.

- **Common parts management**

This tab allows you to choose the folder where common parts are located in order to display them in the interactive menu. See details in the [Common parts import \[65\]](#) section.

- **Materials management**

Choose here the folder where the materials are located in order to display them in the interactive menu.

You can also choose to change the **Selection frame color** in the interactive menu or to modify the **Selection frame width** of images.


 
Refer to the [Material assignment \[65\]](#) paragraph for more information.

- **Image management**

This tab allows you to choose the folder where pictures are located to display them in the interactive menu.

You can also choose to change the **Border color** and the **Border thickness** of images.

- **Data management**

The operating mode is similar to the [Timelines \[25\]](#) section. You can indeed snapshot several previews of your model by clicking on the button  to export them to your 3D software. The minus button  deletes a snapshot.

- **Options tab**

Choose in this tab the units you want to use to move a part. For example, the [Move part \[62\]](#) interactive menu has units for translating a surface.

Immersion and interaction in the 3D World

This section covers the ergonomics of immersive environments available to a user in such an environment, without using the interface of Accel VR Pilot or VSN player.

Creating an Immersive Sensation

Multiple elements work together to create a sensation of immersion for a user, including:

- System calibration,
- Shuttle position,
- The use of tracking devices,
- Appropriate preparation of the database to be used.

The user in an immersive environment is particularly sensitive to the position of his feet with regard to what he perceives as the ground in the virtual world. Make certain that his feet are on the same level as the virtual ground by positioning the exploration shuttle at the level of the ground.

Camera Animations

Camera animations, when they are available in your database, can be used to increase the immersive sensation in multiple ways. Depending on the experience you are aiming to create, different locks and camera animation options will be required.

Interaction Devices

Various devices improve the feeling of immersion by facilitating interaction with the immersive environment.

It is possible to add in the immersive system a device that lets you interact with the virtual world such as a Fly Stick or the Apex by VICON. These devices allow surfaces to be indicated with a virtual laser beam. Based on the active interaction mode, you can then use the device's buttons to interact with the indicated surface or object.

For this to work, three conditions must be met:

- The model must have first been correctly configured in Patchwork 3D to be interactive.
- A tracking system of the position and the orientation of the user's head.
- One or two tracked interaction devices (left hand and right hand).

**TIP**

If your device is not tracked (e.g, a gamepad), please use the following path **Manipulators > Device > Gamepad interactions** from **Advanced system settings**. You can then set your interaction device to be 0.4m (40cm) below the head tracker, which will place it approximately as though it were held at the stomach-level by an adult user.

Interactive Menu

**TIP**

The operating mode of the interactive menu depends on the device used and on the possibility of using one hand (gamepad, Apex in a CELLAR) or two hands (HTC VIVE®, Oculus Rift®, and HP Reverb).

Using the PieMenu system

Two configuration options are possible:

- Assign the interactive menu and interactions to the same VR controller.
- Assign the interactive menu to a VR controller (right or left) and assign the interaction to another (right or left).

Use the buttons or axes (triggers, sticks) that you have previously configured in the **PieMenu bindings** tab from the **Advanced system settings** (path: **⌘ > Pilot > Interaction > PieMenu system > PieMenu bindings** tab) for:

- going to the next interaction,
- going to the previous interaction,
- choosing options,
- triggering an interaction.

**NOTE**

Please refer to the operation of the [52] to assign interactions to the gamepad buttons or of one or more controllers of a virtual reality headset.

Using the MoveNAct system

The operation of the **MoveNAct** menu has been designed for two-handed use.

The immediate assignment allows you to combine multiple interactions at the same time. Please see the section [53] tab for more information.

Whatever menu you choose (PieMenu or MoveNAct) all possible interactions are present.

Navigate through the menu and select the features below.



Configuration

The options available in the floating menu are as follows:

- Apply Similar Products (On / Off)
- Cycle bookmark cycle (On / Off)



Animation

When **Play Reverse** is enabled, you can interact with animation to play it in reverse mode (animation return to its initial state).

Details are described in the [Timelines \[25\]](#) section.



Interest Point

The **Interest point** functionality allows you to point an area that you need to focus on like a pointer during a slide presentation.

See details in the paragraph of the [Interest point management \[27\]](#).



Grab world

Grab world allows to move the world with a VR controller.

The functions available in the floating menu are:

- Lock altitude (On / Off)
- Lock Horizon (On / Off)



Spotlight

The interaction device works like a spotlight to light the shadowed areas of your models. Point at the dark areas to shine the light at them

The functions available in the floating menu are:

- Color (White / Warm / Cold)
- The radius of the lighting (small, medium, large)



Manage clipping planes

The functions available in the floating menu are:

- Manage clipping plane (Plane 1)
- Manage clipping plane (Plan 2)
- Manage clipping plane (Plan 3)
- Free mode (On / Off) lets you move the clipping plane in the space without any axis restrictions.

More information in the [Clipping planes management \[28\]](#) paragraph.



Snapshot

The **Snapshot** functionality allows you to capture a virtual reality scene from the operator's point of view.

More information in the [Snapshot management \[28\]](#) section to configure it.



Measure tools

The **Measure tools** functionality allows you to measure a distance between two points and calculate an angle.

Show angles allows you to calculate the angle between two opposite points.

Please refer to [Measure tool management \[27\]](#) section for more details about its operating mode.



Turntables

The turntables in VR have the same actions as the Pilot View. Please refer to the [Turntables \[28\]](#) paragraph for more information.



Targeted navigation

The targeted navigation allows you to target, using the joystick of the immersion device, the location from which the shuttle will rotate.

The functions available in the floating menu are:

- the direction of rotation (**Clockwise**, **Anticlockwise**)
- the rotation speed (**Slow**, **Moderate**, **Fast**)



Quick bookmark

The quick bookmark allows the operator to be repositioned at the last position recorded by the latter. This feature is very convenient for the operator to find the last recorded position when exploring the virtual environment.

The options available in the floating menu are:

- **Save** the current position of the operator in the virtual environment.
- **Restore** the last recorded position.




TouchAction



WARNING

Only available with the TouchAction plugin delivered separately.

The **TouchAction** allows the operator to interact with Digital Appearance Mockup (DAM) product surfaces that have animation or configuration triggers. These triggers must be previously configured in Patchwork 3D (Live mode).

To activate the trigger, position your hand (right or left) close to the surface that has a trigger, the hand will then point the finger at the surface to inform you that an interaction is available and a loading time appears. Wait for the charging time to complete the trigger activation. The **Loading duration** is configurable in the  **Advanced system settings > Touch Interaction Plugin**.



NOTE

Your Digital Aspect Mockup (DAM) must be previously prepared in Patchwork 3D with interaction triggers.

It is recommended to use the avatar **Hands** to interact with the product. [More information here \[47\]](#) to use an avatar **Hands**.



Select a part



WARNING

Only available with a CAD Tools license option.

Select a part allows you to select multiple parts that interact directly with the following functions: **Move part, Reset transform, FFD Deformer**.






Move part



WARNING

Only available with a CAD Tools license option.

The Move part allows you to grab and move a surface with the trigger of your immersion device.

Icon	Action	Description
	Translate	Moves a surface in a translational movement along the axis (X, Y, Z) you have chosen.
	Rotate	Rotates a surface according to the axis (X, Y, Z) that you have chosen.
5 °	Tilt	Tilts the surface by a preselected factor degree.
	Decrease / Increment	Decreases or increments the surface position.

The functions available in the floating menu are:

- Lock X (On / Off)
- Lock Y (On / Off)
- Lock Z (On / Off)

- Lock orientation (On / Off)

Reset transform



WARNING

Only available with a CAD Tools license option.

This function allows you to return the selected surfaces to their original transformation as they were when the file was opened.



Curve edition

 
 


WARNING

Only available with a CAD Tools license option.

This panel allows you to draw and edit curves that can be exported to several 3D software compatible files.

Functionality	Icon	Action	Description
		Add	Add a curve.
		Delete	Deletes a curve.
		Delete all curves	Deletes all curves.
		Cut	Cuts a curve.
		Link	Links two curve segments together.
		Add	Adds a point to a curve.
		Delete	Deletes a point from a curve.
		Move	Moves the selected points.
	Free curve	Free curve	Draws curves without restriction.

Functionality	Icon	Action	Description
		Stick to surface	Draws curves that stick to the selected surface.
		Select and move	Selects the point that intersects the two curves. Creates a new point on both curves.



Show / Hide products

This function allows you to show or hide product(s). This function is also available in the [Scene \[23\]](#) tab.



Show / Hide surfaces

Shows or hides surfaces individually.

The surface mesh (wireframe) is green to inform you that the surface remains visible. The mesh of the surface turns red to inform you that the surface will be hidden when you close this function.




 


FFD Deformer



WARNING

Only available with a CAD Tools license option.

The **FFD deformation** (Free Form Deformation) panel allows you to modify the geometry of one or more surfaces by applying FFD deformation as Autodesk Maya® does it.

Functionality	Action	Description
	Increase or decrease	Increases or decreases the number of divisions on the X axis.
	Increase or decrease	Increases or decreases the number of divisions on the Y axis.
	Increase or decrease	Increases or decreases the number of divisions on the Z axis.
	Mirror off	Symmetrically duplicates the number of surface division when you deform an object (feature must be On).
	Reset	Resets all changes.



Material assignment



WARNING

Only available with a CAD Tools license option.

This function allows you to assign a material to a pointed surface by selecting it from a directory tree previously loaded. If this surface belongs to the selection, all surfaces of the selection will have the same material. See details in the [CAD Tools Configuration \[57\]](#) section.



Common parts import



WARNING

Only available with a CAD Tools license option.

This function allows you to add models from a directory tree previously loaded. See details in the [CAD Tools configuration \[57\]](#) paragraph.



Image



WARNING

Only available with a CAD Tools license option.

This function allows you to display an image (picture, sketch, etc...) in order to use it as a drawing template to compare your 3D model with this image. Pictures can be load from a directory tree previously loaded. See details in the [CAD Tools management \[57\]](#) paragraph.

ACCEL VR UNIT

Each Accel VR Unit is generally installed on its own dedicated machine. The Accel VR Unit stations are synchronized computation units. The efficiency of their hardware configuration has a considerable influence on the rate and fluidity of navigation in the real time scene.

Each station with Accel VR Unit installed must, therefore, have the best possible hardware configuration. The latest generation professional graphics cards with dedicated memory greater than 2 GB are recommended.

Stations with several GPUs can be used to calculate the images of several windows.

When the Accel VR Unit application is launched, a command prompt window opens. The station is then ready to receive instructions from the Accel VR Pilot to compute the images invoked and display them in real time on the visualization devices.

SUPPORT

For any further information about Accel VR, please contact our support service by e-mail: support@lumiscaphe.com (<support@lumiscaphe.com>).

APPENDIX

Preparing a database

To take advantage of all the functionality of the software, databases must be properly prepared.

Accel VR supports KDR format databases exported from Patchwork 3D.



NOTE

Check that your KDR database is compatible with the performance of your hardware.


Linking a Configuration Option to a Surface

Surfaces used as triggers for configuration options are set in Patchwork 3D.


Use the labeling system available in the **Tag manager** editor (**Shaper > Surfaces** menu > **Tag manager**) to add a tag corresponding to the partition of the configuration you want to use, and assign the tag to the trigger surfaces. To add a configuration rule of the partition type, add a tag "partition". To add a configuration rule of the partition.value type, add a tag "partition".

Type	Configuration symbol	Tag to apply	Result
partition	armrest	armrest	shows / hides armrests
partition.value	material.wood	material	displays the different values (wood, marble ...) one by one
partition.value	material.marble	material	displays the different values (wood, marble ...) one by one

More information is available in the Patchwork 3D user documentation.

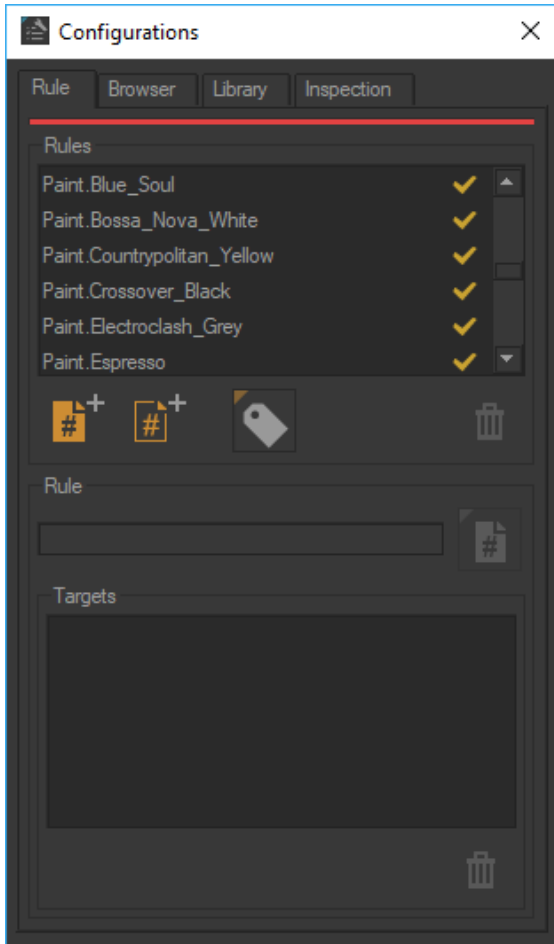


Left: defining paint.value type rules in the **Create Configurations** editor.

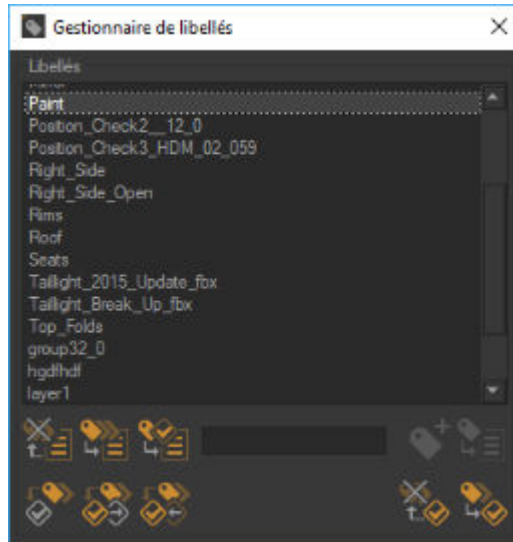

Right: Creating a paint tag in the **Tag Manager** and assigning it to a selected surface.

Creating Animation

Animations are created in the **Timelines** editor of Patchwork 3D.

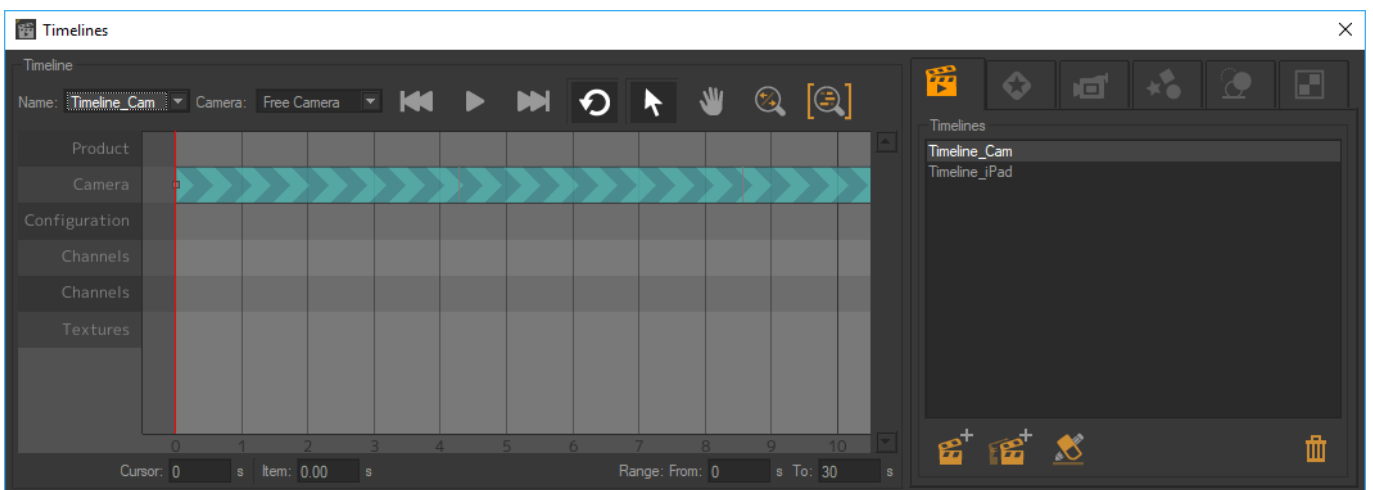


Timelines editor


Creating Configuration Bookmarks

The configuration bookmarks are used by the Accel VR application. They are set up in Patchwork 3D, from the **Library** tab of the **Create configurations** editor.

This tab includes tools for updating a configuration saved as a bookmark and for managing the list by adding or deleting bookmarks.

To create a configuration bookmark, first set the desired configuration using the **Configuration Browser**. This tool is also available from the **Browser** tab of the **Create configurations** editor.

Then, in the **Library** tab of the **Create configurations** editor, click the button  to create a new bookmark with the current configuration.

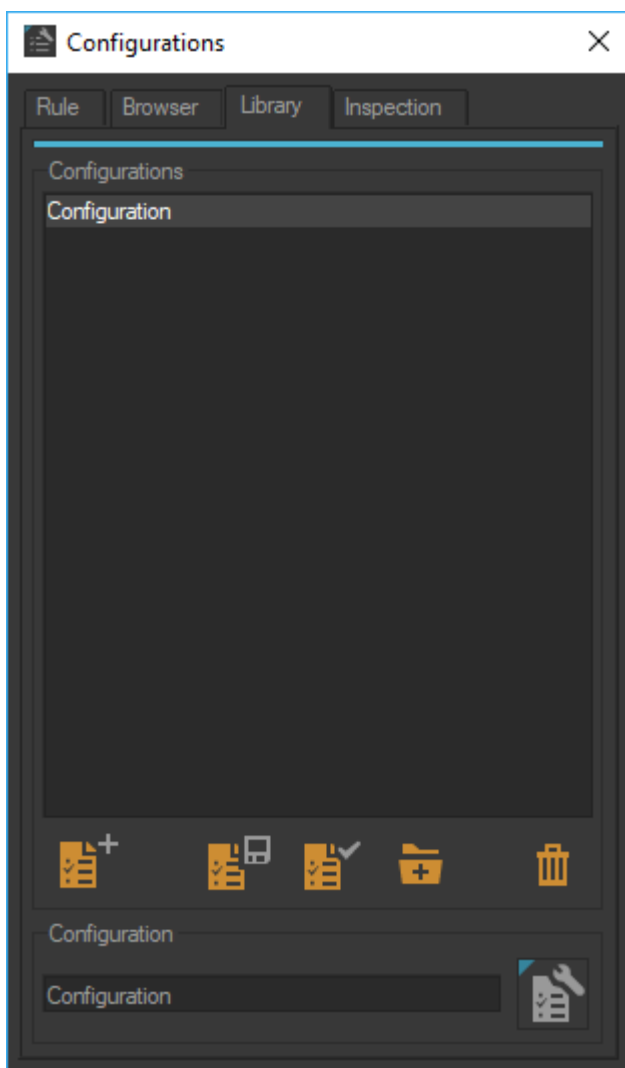


Configurations editor

Creating Camera Bookmarks

Camera positions set in Patchwork 3D are used as camera bookmarks by the application of Accel VR.


Manage your cameras in the **Cameras** editor.

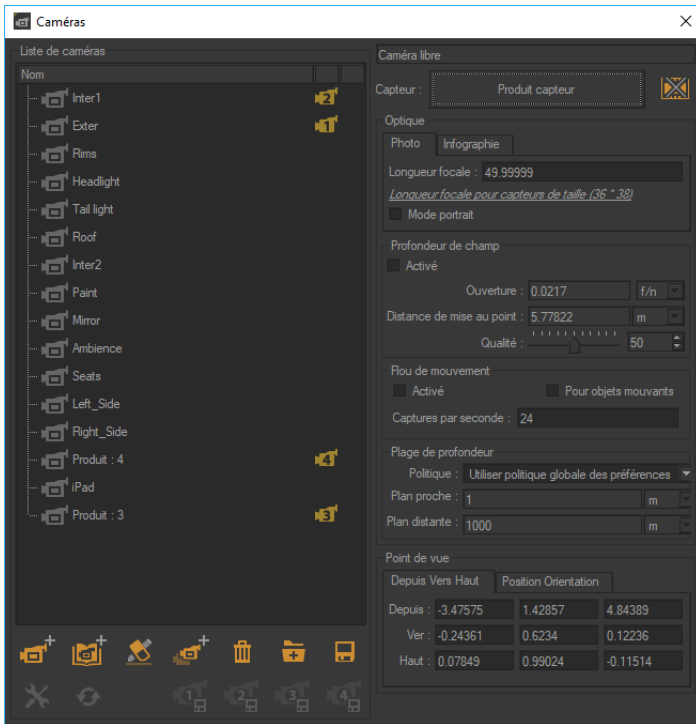

Cameras Editor

Exporting the Database in the KDR Format

Export your database as a KDR file such as the screenshot below.

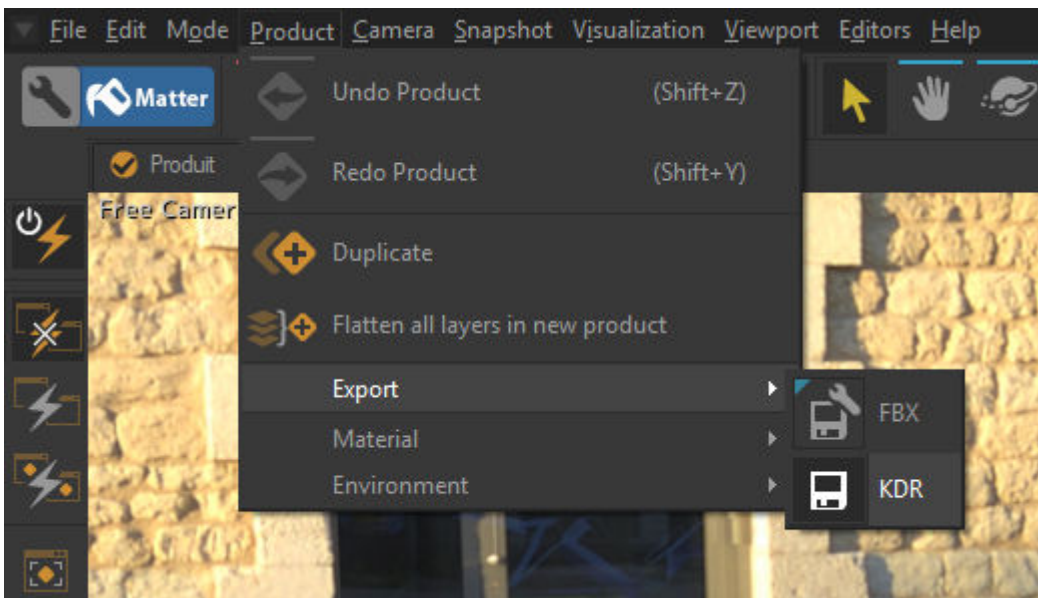

Export a database in KDR format.